



See Page 1 for
Quick Start Checklist

Song Meter SM4

BIOACOUSTICS RECORDER

User Guide

CONTENTS

1	Quick Start Checklist	1
2	Overview	2
2.1	Introduction.....	2
2.2	Visual Tour.....	3
2.3	The Main Menu.....	4
3	Setup and Installation	5
3.1	Opening the Recorder.....	5
3.2	Turning Power On and Off.....	6
3.3	Installing Internal Batteries.....	6
3.4	Connecting External Power.....	7
3.5	Inserting SD Memory Cards.....	8
3.6	Connecting External Microphones.....	9
3.7	Replacing a Built-in Microphone.....	10
3.8	Connecting the GPS Accessory.....	11
3.9	Securing the Recorder.....	12
3.10	Mounting the Recorder.....	12
3.11	Replacing the Clock Battery.....	13
3.12	Reading the Recorder Temperature.....	13
4	Settings	14
4.1	Navigating the Menus.....	14
4.2	Setting the Date and Time.....	14
4.3	Setting the Prefix for Recorded Files.....	15
4.4	Setting the Location and Time Zone.....	15
4.5	Setting the Solar Calculation Method.....	16
4.6	Setting a Minimum External Battery Voltage.....	16
4.7	Audio Settings.....	17
4.8	Setting a Delayed Start.....	18
4.9	Setting the LED Indicator Mode.....	18
5	Making Scheduled Recordings	20
5.1	Recording Operation Overview.....	20
5.2	Using a Quick Start Schedule.....	20
5.3	The Recording Screens.....	22
5.4	Checking the Status of the Recorder.....	22
5.5	Monitoring Live Audio with Headphones.....	23
5.6	Stopping a Recording Schedule.....	24
5.7	Making an Instant Recording.....	24

5.8	Recording Files	24
5.9	Recording Metadata	25
5.10	Recording Summary Text File	25
6	Creating Custom Schedules	27
6.1	Schedule Blocks	27
6.2	SM4 Configurator Software	28
6.3	Editing a Schedule	29
6.4	Adding or Deleting Schedule Blocks.....	29
6.5	Schedule Block Examples	30
6.6	Importing a Schedule	32
6.7	Exporting a Schedule	33
7	Utilities	34
7.1	Exporting Diagnostics	34
7.2	Resetting to Factory Default Settings	34
7.3	Testing Microphones with the Calibrate Utility	34
7.4	Formatting SD Memory Cards	35
7.5	Updating the Firmware	35
8	Specifications	36
8.1	Physical	36
8.2	Power	36
8.3	SD Memory Cards	37
8.4	Audio	37
8.5	Microphones.....	38
9	Warranty and Disclosures	39

1 Quick Start Checklist

- ❑ Release the side latch, open the security cover, and then open the middle section to access the battery bay.
- ❑ Install four (4) new alkaline or NiMH D batteries. Close the middle section. (To use external batteries, see *Connecting External Power*.)
- ❑ Insert one SD memory card in slot A and an optional second card in slot B.
- ❑ Slide the power switch down to **INT** for internal battery power. The recorder powers on and the main menu appears on the display. (If using an external power source, slide the switch up to **EXT**.)
- ❑ Press **CHECK STATUS** to verify the time, microphone, firmware, SD memory cards, battery voltage, and temperature.
- ❑ (Optional) Attach the GPS to auto-set the date, time, and location. A number sign (#) appears in between the date and time on the check status screen when the data setup is complete. Disconnect the GPS.
- ❑ Use the keypad to select **Quick Start** and choose a recording schedule.
- ❑ For schedules that start or end at times relative to sunrise or sunset (for example, *Record Sunrise -> Set*), you must set the latitude and longitude, date, time, and time zone. If you attached the available GPS accessory in an earlier step, the location, date, and time are set for you automatically; however, you must always set the time zone. It is not set by the GPS.
- ❑ Press the **SCHEDULE START** button. The schedule begins:
 - The SM4 *sleeps* (display goes blank) to conserve battery power if a recording is not scheduled in the next 45 seconds.
 - The SM4 *wakes* (display illuminates) at the next scheduled recording start time and saves recordings to the SD memory card(s).
- ❑ Close the security cover and latch. To secure the recorder, attach an optional lock. Mount the recorder in a suitable location for recording. You can leave the recorder unattended after this step.
- ❑ When the deployment ends, press and hold **SCHEDULE STOP** to finish recording. Eject the SD memory card(s) and review the recordings.

Contacting Support

For issues or questions not addressed in this guide, contact the Wildlife Acoustics Support Team:

- Email: support2016@wildlifeacoustics.com
- North America (toll-free): 1-888-733-0200
- Outside North America: US+1 978-369-5225 (Toll charges may apply.)

2 Overview

2.1 Introduction

The latest generation in the Song Meter series, the SM4 is a weatherproof, programmable audio recorder designed for the periodic, seasonal, and long-term monitoring of wildlife bioacoustics in almost any environmental condition.

You can schedule daily recordings to meet a variety of needs including times that are relative to sunrise and sunset, specific duty cycles with on/off recording patterns, and continuous monitoring all day and all night. The SM4 optimizes battery life and memory capacity to record for extended periods of time. Using both memory slots and new alkaline batteries, a typical deployment can record for up to 400 hours spanning several months.

Features

- Lightweight, portable, and completely weatherproof
- Two (2) built-in low noise microphones for two-channel stereo sound (built-in microphones can also easily be replaced, if necessary)
- Supports one or two standard SDHC or SDXC memory cards
- Weatherproof keypad and backlit display for easy entry and status
- LED indicator provides recording and sleep mode feedback
- Integrated top and bottom mounting flanges are designed to work with cable locks, screws, radiator clamps, bungee cords, and other fasteners
- Easy to set up and use with convenient Quick Start daily recording schedules and one-touch start
- Customize schedules and estimate impacts on SD memory cards and battery life with the available SM4 Configurator software
- One-touch status check shows memory card utilization, battery voltage, and other recorder health information without interrupting recordings
- External power option using an SM3/SM4 power cable (sold separately)
- Self-generated diagnostics assist in basic troubleshooting
- Internal temperature and battery voltage logging
- Headphone port for real-time monitoring and system verification
- Optional GPS accessory automatically sets the date, time, latitude, and longitude and logs recording coordinates

2.2 Visual Tour



ITEM:	DESCRIPTION:
Display	Backlit screen displays all main menu items, settings, values, message prompts, and status information.
Security Cover	Protects the recorder. The cover swings open/closed and can be secured with a standard lock (sold separately).
Latch	Grip and pull to open the security cover. To close, push the security cover down until the latch clicks.
LED Status Indicator	Flashes  green every second when recording and every minute when sleeping.
Keypad	Press the keypad buttons to navigate the menus and options on the display. Buttons include ▲Up or ▼Down , ◀Left or ▶Right , ENTER , SCHEDULE START , SCHEDULE STOP , and CHECK STATUS .
Mounting Flanges	Rugged and ready for almost any environment. Use the top and bottom cutouts to mount the recorder.
Power Switch	Slide down to turn power on using internal battery (INT). Slide up to use optional external power (EXT) or to turn off (if no external power).
Built-in Microphone	On left and right, integrated replaceable low-noise stereo microphones.
Memory Slots A and B	Insert removable SD memory cards to store recordings.
Lock Ring	Insert the shackle of an optional key or combination lock to secure your recorder.
GPS Connection	Use the available GPS option to automatically set the date, time, and location settings.
Pressure Vent	Temperature, UV, and water-resistant vent protects the enclosure from condensation.
Headphone Jack	Connect headphones and press ENTER to listen to real-time audio as it is recorded.

2.3 The Main Menu

Refer to the following table when navigating the main menu on the display.

Menu Item	Description
Quick Start	
Record Always	Records continuously 24 hours a day.
Record 30on & 30off	Repeats an hourly duty cycle made up of 30 minutes of recording followed by 30 minutes of sleep.
Record 5on & 55off	Repeats an hourly duty cycle made up of 5 minutes of recording followed by 55 minutes of sleep.
Record Sunrise->Set	Based on your location, date, and sunrise/sunset settings, records continuously from sunrise until sunset.
Record Dawn & Dusk	Based on your location, date, and sunrise/sunset settings, records 2 hours centered at sunrise and 2 hours centered at sunset.
Settings	
Audio	Configure audio settings for recordings.
Date and Time	Set the local date and time for your recorder.
Location	Set the recorder prefix ID and the latitude, longitude, and time zone for your location.
Sunrise/Sunset Type	Set the method used to calculate the sunrise and sunset times. Choices include astronomical, civil, or nautical twilights or the actual sunrise/set times.
Delay Start	Delays the start of your daily schedule until midnight on a specified date.
Battery Cutoff	Set the cutoff voltage for external batteries. To prevent battery damage, the recorder automatically shuts down if the voltage drops below this level.
Schedule	
Edit Schedule	Add, modify, or delete schedule blocks.
Import Sched+Setts	Import a schedule and settings from an SD card.
Export Sched+Setts	Export the current schedule and settings to an SD card.
Utilities	
Export Diagnostics	Save status and troubleshooting information to an SD card to send to the Wildlife Acoustics Support Team.
Set factory default	Restore the original recorder settings to their factory-fresh values and revert to a like-new state. CAUTION: Any custom schedules or settings are replaced.
Calibrate Mic	Test the sensitivity levels of built-in or connected microphones with a third-party external calibrator.
Format all cards	Erase and reformat the SD memory cards. CAUTION: All data on the cards is permanently lost.
Firmware Update	Update the recorder with a new firmware file that you download to an SD memory card.

3 Setup and Installation

3.1 Opening the Recorder

When instructed by the procedures in this guide to open the recorder, follow the steps below.



1. Locate the handle for the security cover on the front right side of the recorder as shown.
2. Grip the handle and lightly pull it to release the latch. The cover flips open and rotates along its hinged spine like a book, exposing the display and keypad in the middle section. At this point, you can insert memory cards, adjust the power switch, and connect an optional GPS or headphones. Continue with the next step only when you are installing batteries, or replacing a built-in microphone.
3. Press the small circular indentation between SD memory card slots A and B with your thumb to release the middle section. If it is difficult to release the section, press down closer to the gasket seam. This section swings open exposing the battery bay.

To close the cover, reverse the steps:

1. Gently and firmly push the middle section (display and keypad) down until it snaps into place.
2. Gently and firmly push the security cover down until it snaps into place.
3. Align the security cover latch with the locking ring and snap into place.

3.2 Turning Power On and Off

Follow these steps to switch recorder power on and off based on your choice of internal or external power source. Only one power source (internal or external) can be active at a time.

1. Open the cover to access the power switch on the side of the middle section above memory slot A.
2. Slide the switch down to **INT** to turn power on when using internal batteries; slide the switch up to **EXT** to turn power on when connected to an external battery. Only one power source is used at a time. Whichever position does not have a battery installed is functionally *off*.
3. When you want to turn the recorder off to conserve battery power, slide the switch to the opposite position (**EXT** when using internal batteries and **INT** when using an external battery).

NOTE: Do not turn the power off when a recording is in progress. To safely exit from recording, press **SCHEDULE STOP**, allow the recorder to return to the **Main Menu**, and then switch the power off. Avoid quickly switching power off and on again (avoid quick switches between **INT** and **EXT**). The recorder can interpret this sudden loss and restoration of power as an error and may start creating diagnostics.

3.3 Installing Internal Batteries

The recorder uses four size D alkaline or NiMH batteries. The SM4 enters a very low-power sleep state between scheduled recordings to conserve energy and maximize efficiency for long deployments.

Prior to installation, we recommend that you test all batteries with a high-quality pulse load battery tester such as the ZTS MINI-MBT.

1. Open the recorder.
2. Insert batteries with their polarity (+/-) orientation as shown on the battery bay markings.

NOTE: Do not mix batteries of different types, and do not mix old and new batteries. Remove batteries before storing the recorder for an extended time.

3. Close the middle section and gently press down until it snaps into place.
4. To turn on power, slide the power switch to **INT**.
5. When not in use, set the power switch to **EXT** to conserve internal battery power. Without an external battery source, consider the **EXT** position to be *off*. Only one power source (internal or external) can be active at a time.

TIP: Use the Song Meter SM4 Configurator software to estimate the recording requirements for your schedules including battery life and memory storage.

3.4 Connecting External Power

With the optional external power cable, the power connector can accept voltages from 5-17 volts DC. It is intended for 6 or 12-volt external batteries.

CAUTION: If you are unfamiliar with configuring external battery power systems, consult a local installer for assistance.

1. Each power cable is shipped with a snap-on ferrite to meet standards limiting electromagnetic emissions and protecting against electrostatic discharge. Install the ferrite near the end of the cable as close to the recorder as possible.
2. Loop the cable through and snap the ferrite shut. A zip tie is included for further securing the ferrite. The image shows the ferrite as shipped (right) and as installed (left).
3. Align and seat the cable into the **EXT POWER** port on the side of the recorder. Turn the grey locking ring (black on older SM3 cables) clockwise  firmly until it stops and locks into place.



4. The external power cable includes F2-size spade connectors and ring terminals. Connect the cable to a 6 or 12-volt battery using one of the connectors provided. The SM4 provides protection against accidental reverse polarity connections.
5. Open the security cover and slide the power switch up to **EXT**.
6. (Optional) Set a minimum voltage to prevent damage to lead-acid batteries that are not designed for deep discharge. See *Setting a Minimum External Battery Voltage*.

- When not in use, set the power switch down to **INT** to conserve external battery power. With no internal batteries installed, consider the **INT** position to be *off*. Only one power source can be active at a time.

3.5 Inserting SD Memory Cards

Insert at least one SD memory card to save your recordings. The following table shows the stereo recording capacity in hours for each card size by sampling rate to help you choose the right memory card size:

SD Card (GB)	8,000	12,000	16,000	22,050	24,000	32,000	44,100	48,000	96,000
16	139	93	69	50	46	35	25	23	12
32	278	185	139	101	93	69	50	46	23
64	556	370	278	202	185	139	101	93	46
128	1,111	741	556	403	370	278	202	185	93
256	2,222	1,481	1,111	806	741	556	403	370	185
512	4,444	2,963	2,222	1,612	1,481	1,111	806	741	370

- Open the security cover and locate memory slots A and B on the side below the power switch.
- Insert one required SD memory card in slot A or B. Push the card straight in until it clicks into place.
- (Optional) To extend deployments, insert a second SD memory card in the remaining slot.



NOTE: You can use slot A, slot B, or both for recording; however, when importing and exporting schedules or updating the firmware you must use slot A.

- To remove a card, push it in and release it. The spring-loaded slot ejects your card so you can pull it away safely.

If the recorder is unable to access or write to your card, you will see an error screen. If no card is present, insert one. Make sure the small read/write switch on the card is set to allow write access. Use a new memory card, or copy old data to another card or hard disk and then reformat the card to restore its full capacity.

To reformat a card, see *Formatting SD Memory Cards* in *Chapter 7: Utilities*.

NOTE: Do not remove SD memory cards when the SM4 is recording. This could corrupt the card.

3.6 Connecting External Microphones

Instead of using the built-in microphones, you can connect one or two external SMM-A2 microphones (sold separately). The two microphone connectors for channels 0 and 1 mate with our weatherproof acoustic microphones or an extension cable.

The cabled SMM-A2 acoustic microphone is completely weatherproof when installed correctly. It features a hydrophobic membrane transparent to acoustic signals to prevent unpressurized water from entering the microphone and a windscreen to which provides a critical second layer of protection to absorb the impact of wind-blown rain so that only unpressurized water reaches the membrane. We also recommend positioning the microphone so that it is aimed slightly downward or lower to further minimize water entry.

The SMM-A2 can be deployed up to 100m away from the recorder. Cables are available in 3, 10, and 50-meter lengths and can be interconnected to form other lengths.

1. Each extension cable is shipped with a snap-on ferrite required to meet legal requirements for limiting electromagnetic emissions and for immunity from electrostatic discharge. Install the ferrite near the end of the cable as close to the recorder as possible. Loop the cable through and snap the ferrite shut. A zip tie is included for further securing the ferrite. The image below shows the ferrite as shipped (right) and as installed (left).




2. Align and seat the cable(s) into the keyed connector ports.
3. Turn the grey locking ring (black on older SM3 cables) on the microphone or cable clockwise \curvearrowright firmly until it stops and locks into place.
4. Replace the windscreen when the foam begins to break down and flake. With normal outdoor use over time, the foam windscreen fades to brown; however, color degradation does not indicate a loss of integrity.

CAUTION: Do not mount cabled microphones pointing directly up at the sky, flat on the ground, or on ungrounded non-conductive masts, especially in dry or windy conditions. Unsafe mountings can result in damage to the microphones or recorder from electrostatic build-up or lightning. Such damage is not covered under warranty. Check with a professional licensed electrician or installer with experience in outdoor antennas or weather instruments for advice suitable to your specific situation.

3.7 Replacing a Built-in Microphone

The built-in microphones are easily replaceable should they become damaged. Replacement microphones are sold with a new windscreen and O-ring seal.

1. Open the recorder.
2. Firmly grasp both sides of the inline connector located above the battery bay and pull the connector from the socket. Do not pull on the wires, only the connector.
3. Remove the windscreen from the damaged microphone.
4. Loosen the microphone from the outside, turning it ⤴ counter-clockwise. If the microphone is too tight to loosen by hand, use a 5/8-inch wrench. Remove the microphone (left).

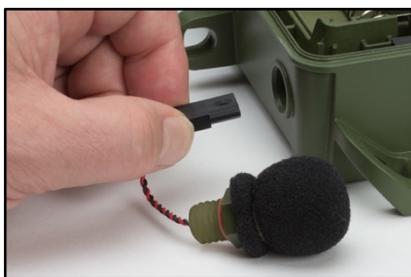

5. Push the connector for the new microphone through the hole (right).
6. Carefully engage the threads on the new microphone and hand tighten ⤵ clockwise a few rotations.
7. Use a 5/8-inch wrench to finish tightening until snug. The flat of the microphone should touch the housing. Do not over-tighten.
8. Plug the inline connector into the socket.
9. Install the windscreen.
10. Test the new microphone to ensure it is working correctly.

3.8 Connecting the GPS Accessory

The optional GPS accessory automatically sets the date, time, latitude, and longitude of the recorder. If you have several SM4 recorders to deploy in the field, you can use a single GPS accessory to set them up.

1. Open the security cover and plug the GPS cable into the GPS port on the side of the recorder.
2. The recorder automatically detects the presence of the GPS. When the recorder wakes up, the GPS is powered up.
3. Press the **CHECK STATUS** button.



A question mark (?) appears between the date and time to indicate that the GPS accessory is attempting to acquire satellite data.

```
2017-Oct-14?14:50:48
R:1.0.0 Mic0:A2 1:A2
SDA: 6/32 B: 0/32
Bat: 5.9V Temp:16.70
```

4. When the GPS has successfully acquired satellite data, it sets the location, date, and time. The question mark changes to a number sign (#).


NOTE: The **Location Settings** coordinates as seen on the display in the main menu are read-only when the GPS is attached. You cannot change them.

5. Disconnect the GPS. The available GPS accessory consumes about 90 mA of additional current—more than four times the current of the recorder itself. For passive recording, we recommend that you use the GPS to automatically set the clock and location at the beginning of the deployment but do not keep it attached for the duration of the deployment.
6. Navigate to **Main Menu > Settings > Location > Timezone** and set the time zone. Even with the GPS accessory installed, you must manually set the time zone. The observation of time zones varies worldwide by region, state, and country.

NOTE: If you are still prompted for latitude and longitude when starting a schedule, it most likely means the GPS accessory does not yet have a fix. Be aware that it can be difficult to acquire a GPS signal in thick vegetation. Also note that the GPS cannot be used for precision time synchronization on the SM4 as it can on the SM3.

3.9 Securing the Recorder

Close the cover to protect the recorder from environmental conditions. To secure the recorder with a standard key or combination lock, press the latch down and insert the lock shackle through the lock ring.

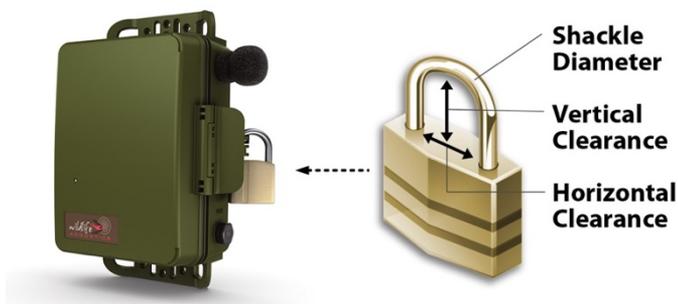

The following requirements apply to the size of the lock and assure that the security door cannot be opened or cracked:

	Minimum:	Maximum:
Shackle Diameter	1/8 inch (3 mm)	3/8 inch (9 mm)
Vertical Clearance	5/8 inch (16 mm)	1.0 inch (25 mm)
Horizontal Clearance	1/2 inch (13 mm)	1.0 inch (25 mm)

NOTE: The lock should be rated for outdoor use.

3.10 Mounting the Recorder


Use the holes in the top and bottom mounting bracket for mounting the recorder with cable locks, screws, radiator clamps, bungee cords, or other fasteners. The enclosure is fully weatherproof and does not require any additional protection.



3.11 Replacing the Clock Battery

A separate button cell CR2032 lithium battery maintains real-time clock settings when the four main D batteries are being exchanged or are no longer operational. The included battery should last up to 3 years. Use the steps below to replace the internal clock battery.

1. Open the security cover and the middle section to access the battery bay.
2. Locate the circular **CLOCK BATTERY** bay behind the display and keypad opposite the main battery bay.

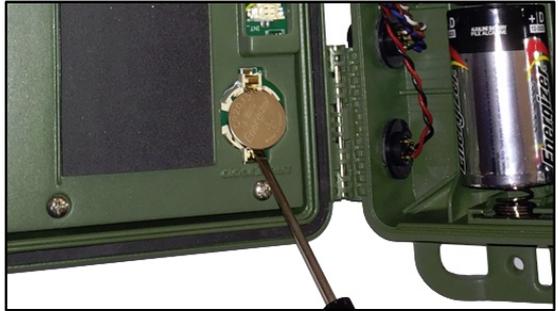

3. Gently insert a flathead screwdriver to pry the old battery out and replace it with a new one. The side with the CR2032 lettering faces you.

3.12 Reading the Recorder Temperature

The recorder includes an integrated temperature sensor to log temperatures inside the enclosure. This is intended for diagnostics only. Heat from the electronics and/or sunlight on the enclosure can significantly increase the temperature reading above ambient air conditions.

Press the **CHECK STATUS** button to view the current temperature reading.

4 Settings

4.1 Navigating the Menus

To navigate the main menu, select items, and configure the values for various settings, use the following basic steps. All procedures in this guide assume you are familiar with these steps.

1. Press **▲ Up** or **▼ Down** and **ENTER** to navigate any menu.
For example, navigate to **Main Menu > Settings > LED Indicator**.
2. Press **ENTER** or **▶ Right** to select menu items and continue to the next editable item. **ENTER** and **▶ Right** are interchangeable in the menus with the exception of the line where schedule blocks are added and deleted.
3. Press **▲ Up** or **▼ Down** to select values.

Tip: To accelerate the pace when selecting higher or lower values, press and continue to hold down the **▲ Up** or **▼ Down** arrow buttons.

4. Press **ENTER** or **▶ Right** to save your edits.
5. Repeat these steps as required. The exact buttons you press may vary by setting and parameter.
6. Press **◀ Left** to exit a line without saving and return to the previous menu.

TIP: For improved visibility in low-light environments, press any button on the keypad to illuminate the display. The backlight remains lit while you continue operating the recorder and turns itself off after 30 seconds of inactivity.

4.2 Setting the Date and Time

Follow these steps to set the date and time manually unless you are using the available GPS accessory to automatically set the current date and time.

NOTE: The recorder does not automatically adjust for Daylight Saving Time.

1. Navigate to **Main Menu > Settings > Date and Time**.
The date and time appear on one line in the following format:

YYYY-MM-DD HH:MM:SS

For example:

2017-Oct-22 20:17:45

2. Press **▶ Right** to set the date (year, month, and calendar day). As you adjust the month and day, the corresponding sunrise and sunset times appear (according to the Sunrise/Sunset Type setting) for that date.

3. Press ► **Right** to set the time (hours, minutes, and seconds).
4. To adjust any value, press ▲ **Up** or ▼ **Down**.
5. Press **ENTER** when finished.

4.3 Setting the Prefix for Recorded Files

You can specify a custom filename prefix of up to 12 characters to identify each recorder. The default prefix combines the model number with the serial number.

The prefix appears in every recording file name and easily identifies recordings made on a specific recorder or from a common shared schedule.

Follow these steps to change the recorder prefix:

1. Navigate to **Main Menu > Settings > Location > Prefix**.
2. Specify a 1 to 12 character prefix from left to right:
 - a. At the first position, press ▲ **Up** to cycle through the alphabetic characters A to Z. Press ▼ **Down** to cycle through the numbers 9 to 0. You can also select a hyphen (it is above the digit 9).
 - b. Press ► **Right** to advance to the next position in the prefix and repeat the previous step.
3. To erase characters, select the blank character. It is higher than the hyphen and lower than the letter A. All of the characters to the right of the blank character are erased.
4. When finished, press ► **Right** to advance to the last position and then press **ENTER**.

NOTE: The prefix can only contain capital letters, numbers, and hyphens. When you change the default prefix, the serial number of the recorder no longer appears in the recording file names; however, it does still appear in the metadata inside the file.

4.4 Setting the Location and Time Zone

If you are not using the available GPS accessory to automatically set the latitude and longitude, you must manually set these parameters. The time zone cannot be set automatically by the GPS and must also be set manually.

The selections you make for latitude, longitude, and time zone enable the recorder to determine the specific sunrise and sunset times for each day.

You can specify the local time zone in hours relative to UTC (Universal Time Coordinated). Exact hour, half-hour, and quarter-hour time zones (:00 :15 :30 :45) are supported.

NOTE: The recorder does not automatically adjust for Daylight Saving Time.

1. Navigate to **Main Menu > Settings > Location > Latitude**.

- Enter the north or south latitude.
2. Navigate to **Main Menu** > **Settings** > **Location** > **Longitude**.
Enter the east or west longitude.
 3. Navigate to **Main Menu** > **Settings** > **Location** > **Timezone**.
Enter the time zone relative to UTC.

4.5 Setting the Solar Calculation Method

The SM4 can schedule recordings relative to sunrise and sunset times, and adjusts these times as they change during the year. You can choose from four different methods of calculating the sunrise and sunset.

1. Navigate to **Main Menu** > **Settings** > **Sunrise/Sunset Type**.
2. Select one of the following solar calculation types:
 - **sunrise/set**: When the sun is just below the horizon.
 - **civil**: When the sun is 6 degrees below the horizon.
 - **nautical**: When the sun is 12 degrees below the horizon.
 - **astronomical**: When the sun is 18 degrees below the horizon.
3. The calculated sunrise and sunset times for the method that you select appear for at the bottom of the screen.
4. Press **ENTER** to save your changes.

NOTE: Sunrise and sunset calculations also require other settings including the date and time, latitude, longitude, and time zone.

4.6 Setting a Minimum External Battery Voltage

You can set a minimum voltage cutoff to help prevent damage to external lead acid batteries from over-discharge. If the external battery voltage falls below this cutoff, the schedule is suspended. The SM4 then wakes every 24 hours to check the voltage and resumes the schedule if the voltage is restored.

1. Navigate to **Main Menu** > **Settings** > **Battery Cutoff**.
2. Press **▲ Up** or **▼ Down** to adjust the power cutoff in volts from 0.0 to 12.0 in 0.1-volt increments.
3. Press **ENTER** to save your changes.

NOTE: Leave the cutoff value at 0.0 if you are using internal alkaline batteries. Any non-zero setting decreases internal battery life as the recorder prematurely suspends operation. Also use a setting of 0.0 for external batteries that are designed for deep discharge.

4.7 Audio Settings

When your schedule starts, it applies your current audio settings. When you import or export a schedule, the settings are included.

1. Navigate to **Main Menu > Settings > Audio**.
2. Select an audio setting to adjust its value using the **▲ Up** or **▼ Down** buttons.
3. Press **ENTER** to save your changes.

The following sections describe each audio setting.

Channel

Select the audio channel or channels. The left microphone is on channel 0 and the right microphone is on channel 1.

Values: stereo, left, or right

Default: stereo

Left and Right Gain

You can adjust the left or right channel audio gain setting to boost the input level of the audio signal from the corresponding microphone. The default 16dB gain is generally a good compromise between having fidelity of weaker signals while maximizing dynamic range to handle louder signals. A lower gain setting might be necessary in loud environments to avoid clipping. A higher gain setting might be necessary if you are trying to analyze very weak signals.

In addition to this programmable gain setting, there is a low-noise 24dB preamplifier gain stage that is always on. The default setting of 16dB (and including the 24dB from the preamplifier) is equivalent to 48dB gain on a Song Meter SM2 and 24dB gain on an SM3.

Values: 0 to 59.5 dB in 0.5-dB increments

Default: 16 dB

Left and Right Filter

You can set a left or right channel high-pass filter, which only allows signals higher than the specified frequency to be recorded. For recording very low frequency sounds such as elephants, set this to **off**. Otherwise it is useful for reducing wind and anthropogenic noise and should be set to at least 220 Hz.

The high-pass filter is a two-pole filter, which attenuates sounds at 12dB per octave. For example, if the filter was set to **1 kHz**, a 500 Hz sound would be attenuated by 12dB as it is one octave lower than the filter's 1 kHz frequency.

Every 6dB represents a halving of sound level, so the 500 Hz sound would appear in the recording at one-fourth of its original amplitude.

Values: off, 220, or 1000 Hz

Default: off

Sample Rate

Your choice of rate determines the number of samples per second used to make a recording during a recording period. Higher sample rates provide the ability to record higher frequencies. Choose a sample rate that is at least double the highest frequency to be recorded.

Values (Hz): 8000, 12000, 16000, 22050, 24000, 32000, 44100, 48000, or 96000

Default: 24000 Hz

Max Length

You can specify the maximum length (time duration) of recordings. The recorder also enforces its own 2.0 GB maximum recording file size. When a recording reaches either maximum, it ends and a new recording file starts.

NOTE: Back-to-back recordings and recordings that are split when either maximum is reached may start a few seconds late to allow time to perform file operations on the SD memory card. This may result in smaller files than the **Max Length** setting. For example, a recording might show a duration of 14:57 even though you set **Max Length** to 15:00.

Values: 1 minute up to 24 hours in 1-minute increments

Default: 01h: 00m

4.8 Setting a Delayed Start

The Delay Start setting waits until a future date to start your schedule. The recorder delays the start of the schedule until midnight of the specified day.

1. Navigate to **Main Menu > Settings > Delay Start**.
2. Set a future start date and set **Enable** to **yes**.

NOTE: You can use this feature to synchronize the start of two or more recorders.

When you start the schedule, a warning reminds you of the delayed start. If the date is in the past, no warning appears and the schedule starts without delay.

4.9 Setting the LED Indicator Mode

The LED indicator blinks green once per second when recording and once per minute when sleeping. This light is visible on the front of the recorder even when the security cover is closed.

1. Navigate to **Main Menu > Settings > LED Indicator.**
2. Choose **always** or **5 minutes only.**

When you choose **5 minutes only**, the LED only appears for approximately the first five (5) minutes of recording after you press **SCHEDULE START** or **CHECK STATUS** or until the first time the unit sleeps. This setting minimizes drawing attention to the recorder and allows you to maintain some level of camouflage when recorder security or visibility is a concern.

5 Making Scheduled Recordings

5.1 Recording Operation Overview

The recording schedule determines when each day the SM4 records and when it is sleeps while waiting for a recording period. While recording, the recorder samples audio signals at a specified sample rate and saves WAV files to SD memory cards.

This chapter guides you in using the Quick Start schedules, and the next chapter covers creating your own schedule as well as importing and exporting schedules.

5.2 Using a Quick Start Schedule

The Quick Start menu includes pre-configured schedules that satisfy most scheduling requirements. They also serve as excellent starting points for editing your own schedule if you need something a little different. Creating custom schedules is fully covered in the next chapter but the remainder of this chapter should be read first to understand how to run a schedule.

1. Navigate to **Main Menu > Quick Start**
2. Choose one of the following Quick Start schedules and press **ENTER**.

Name	Definition of schedule
Record Always	Records continuously 24 hours a day.
Record 30on & 30off	Repeats an hourly duty cycle made up of 30 minutes of recording followed by 30 minutes of sleep.
Record 5on & 55off	Repeats an hourly duty cycle made up of 5 minutes of recording followed by 55 minutes of sleep.
Record Sunrise->Set	Based on your location, date, and sunrise/sunset settings, records continuously from sunrise until sunset.
Record Dawn & Dusk	Based on your location, date, and sunrise/sunset settings, records 2 hours centered at sunrise and 2 hours centered at sunset.

3. When you change schedules, the following confirmation message appears:

```

Overwrite Schedule?
-No
-Yes
  
```

- Select **Yes** to continue loading the selected recording schedule. This overwrites any and all blocks of the existing schedule in the unit with the built in schedule selected. All other settings are unchanged.
- Select **No** to retain the current schedule.

Tip: If you want to save any custom edits or blocks you already made to a schedule, select **No** here to go back and export that schedule to a memory card, and then you

can choose a new schedule and select **Yes** here with confidence knowing your previous schedule was backed up.

4. Press **SCHEDULE START** to start the schedule or **◀ Left** to return to the Quick Start menu. The new Quick Start schedule is loaded even if you return to the menu. See the next chapter for details on running and stopping the schedule.

Tip: The recorder automatically attempts to start the current schedule after three (3) minutes of inactivity.

5. When you press **SCHEDULE START**, warning messages may alert you about needed settings, missing SD memory cards, or incompatible or missing microphones.
6. Each warning is displayed for several seconds. You can proceed immediately to the next warning by pressing **▼ Down**. After the last warning, the recorder will attempt to run the schedule.
7. While any warning is being displayed, you can press **SCHEDULE STOP** or **◀ Left** to avoid running the schedule and return immediately to the main menu. Adjust any settings or hardware configurations to resolve the warnings. Press **SCHEDULE START** again when you are ready.
8. One of the following screens appear:

If your schedule records always:

```
2017-Dec-0510:58:37
Preparing to record
A CONTINUOUS #00001
```

If your schedule calls for specific start and end times that define a contiguous recording period, recording within the next 45 seconds, then the first recording period start and end times are shown:

```
2017-Dec-0510:58:37
Preparing to record
A 11:00-17:00 #00002
```

If you defined a duty cycle that calls for an even smaller segment of recording time, that time range appears:

```
2017-Dec-0510:58:37
Preparing to record
A 11:00-11:30 #00003
```

If the first recording period start time is more than 45 seconds into the future, then the recorder goes to sleep to conserve power:

```
2017-Feb-10 11:05:00
Going to sleep until
2017-Feb-10 19:15:00
```

The recorder wakes up 30 seconds before the next scheduled recording period so that it is ready to record on time.

5.3 The Recording Screens

While it is recording, the SM4 shows a screen like one of the following:

```
2017-Apr-25 23:50:48
Currently recording:
A CONTINUOUS #00088
STEREO @SR=48000
```

```
2017-Apr-26 09:02:48
Currently recording:
B 09:00-09:30 #00089
STEREO @SR=24000
```

Both examples show the following details on four (4) lines:

- Line 1: The current date and time.
- Line 2: The **Currently recording:** status message.
- Line 3: The current card slot that the recorder is writing to (**A** or **B**) followed by the beginning and ending times of the current recording period or **CONTINUOUS** if the schedule is set to record all the time (the Quick Start **Record Always** schedule for example). On the right side of the same line is the running count of recording files saved since the recorder was last powered on.
- Line 4: The current recording channel and sample rate.

5.4 Checking the Status of the Recorder

We recommend that you perform this procedure to check the status of the recorder and SD memory cards before every deployment.

1. Press the **CHECK STATUS** button. If the recorder is sleeping, you must press and hold the button. The Check Status screen appears. For example:

```
2017-Oct-23 9:14:48
R:1.0.0 Mic0:IN 1:A2
SD A: 7/64 B: EMPTY
Bat: 5.2V Temp:17.00
```

The following status information appears:

- Line 1: The current date and time.

- Line 2: The installed firmware version and the currently connected microphones on channels 0 and 1:
IN: a built-in microphone
A1/A2: an external acoustic microphone
- Line 3: The consumed memory as a fraction of the total capacity in GB for the SD memory cards in slots A and B. In this example, 7 GB have already been used on a 64 GB card in slot A and there is no card in slot B.
- Line 4: The internal battery or external power supply voltage, and the internal temperature in degrees Celsius.

NOTE: The internal temperature of the recorder is intended for diagnostics and not as an accurate measurement of outside air temperature.

2. (Optional) You can press the **CHECK STATUS** button again to return to the previous screen. The status screen automatically stops appearing after ten (10) seconds.

NOTE: When the recorder is sleeping, the **Going to sleep until** screen appears first and another press of the **Check Status** button is required to view the Check Status screen.

5.5 Monitoring Live Audio with Headphones

You can connect headphones to the headphone jack to listen to real-time audio as it is recorded. Headphone audio can be heard only during a live recording.

1. Open the security cover and insert the headphone cable into the headphone jack on the side below the GPS port.
2. You can start a schedule, start instant recording mode, or allow a currently running schedule to continue.
3. Press **ENTER** during a recording to enable monitoring on headphones.

CAUTION: Initial headphone volume may be loud.

4. Press **▲ Up** or **▼ Down** to adjust the volume.
5. Press **ENTER** again to toggle the headphone output on and off. Headphone sound automatically resets to off when the current recording period ends.



5.6 Stopping a Recording Schedule

 
When a schedule is running, or scheduled to run, you have the option to stop it.

1. Press and hold the **SCHEDULE STOP** button for several seconds.
2. When you stop a running schedule, the current recording is saved to the SD memory card before it ends.
3. The recorder automatically attempts to resume the current recording schedule after three (3) minutes of inactivity. When not recording for an extended period of time, power the recorder *off*.

5.7 Making an Instant Recording

In addition to running a schedule, you can start an instant recording anytime. Starting an instant recording is like forcing a record *always* schedule for 24 hours.

1. Verify the recorder is turned on and displaying the main menu. If the recorder is sleeping, press and hold **SCHEDULE STOP** to wake it.
2. Press and hold both the **▲ Up** and **▼ Down** keys at the same time.
3. After a brief **Preparing to record** screen, the recorder immediately starts continuous instant recording.



2017-Oct-14 14:50:48
Currently recording:
A CONTINUOUS
STEREO @SR24000

4. Press **SCHEDULE STOP** to stop instant recording. After 24 hours, instant recording will automatically stop and the current schedule will begin.

NOTE: The length of recordings made during instant recording is dictated by the **Max Length** setting in **Audio Settings**.

5.8 Recording Files

Audio recording files are saved in the **Data** folder on each SD memory card and use the following naming convention:

PREFIX_YYYYMMDD_HHMMSS.wav

PREFIX: The current prefix as set in the location settings.

YYYYMMDD_HHMMSS: The date-time stamp including the year, month, day, hour, minute, and second when the recording started.

.wav: The audio file name extension for Waveform Audio File Format (WAVE).

5.9 Recording Metadata

Values for the attributes listed below are stored as metadata in your recordings. The Wildlife Acoustics Support Team can use metadata to troubleshoot issues.

NOTE: You can open a recording in the SM4 Configurator computer software to view the schedule and settings used to make the recording.

Device Model: The device model name. For example, *SM4*.

Device Serial Number: The unique serial number of your recorder.

Firmware Version: The firmware version installed on the recorder.

Prefix: The prefix assigned to the recorder in the location settings.

Timestamp: The date and time when the recording started.

GPS Coordinates: The location of the SM4 when the recording first started. The file metadata stores the location coordinates that you manually entered on the recorder as well as the coordinates from the GPS accessory if attached.

Schedule and Settings: The schedule and all settings in use when the recording was made.

5.10 Recording Summary Text File

Approximately once per minute during a recording, the SM4 appends a line to the summary text (.txt) file. This file is in comma-separated values (.csv) format. You can open it in Microsoft Excel, in database software, or in a text editor. The file begins with a header line which identifies the fields that appear in each line of summary data:

```
DATE, TIME, LAT, , LON, , POWER(V), TEMP(C), #FILES, MIC0 TYPE, MIC1 TYPE
```

Three (3) lines from a sample summary file appear below:

```
2017-Jan-22, 17:15:24, 42.00000, N, 71.00000, W, 5.9, 12.00, 0, A1  
2017-Jan-22, 17:16:38, 42.20000, N, 71.10000, W, 5.9, 11.75, 0, IN  
2017-Jan-22, 17:17:47, 42.35000, N, 71.18200, W, 5.9, 11.75, 1, IN
```

DATE & TIME: The date and time for each entry. This is the time taking into account the time zone set in the location settings.

LAT & LON: If the GPS accessory is installed, the latitude and longitude are given with identifiers for north (N), south (S), east (E), and west (W). Without GPS, the latitude and longitude values are 0.

POWER(V): The internal battery or external power supply voltage. In the example, the voltage is 5.9 volts.

TEMP(C): The temperature in degrees Celsius inside the recorder. In the example, the internal temperature has fallen from 12.00 to 11.75 degrees.

#FILES: The number of recording files written since the previous summary file line. Since a new summary line is written one per minute, if your recording is longer than 1 minute a zero appears on all lines until the recording is concluded.

MIC0TYPE & MIC1TYPE: The microphone types currently attached to channels 0 and 1. When an internal mic is used, **IN** appears. External mic values include **A1** or **A2**).

6 Creating Custom Schedules

In addition to using one of the Quick Start schedules, you can also create your own schedule using the built-in editor, or import a schedule from an SD memory card. You can export the current schedule to an SD memory card. You can also use the Song Meter SM4 Configurator software on your computer to create and edit schedules, which can be imported to the recorder.

SM4 schedules are flexible and portable. Schedules exported from recorders or created by the Song Meter SM4 Configurator software include all configurable settings. The appropriate settings are applied when a schedule is imported. This coupling of schedules with their settings enables you to share entire configurations from one recorder to another.

6.1 Schedule Blocks

Schedule blocks are the core components that define a daily recording schedule. Every schedule has at least one block. A block has the following three lines:

```
START:  time hh:mm or  
        rise +/-hh:mm or  
        set  +/-hh:mm  
  
DUTY:   always or  
        ON hh:mm OFF hh:mm  
  
END:    time hh:mm or  
        rise +/-hh:mm or  
        set  +/-hh:mm
```

Each block defines a single continuous recording period between its **START** and **END** times (if **DUTY** is **always**), or a series of smaller non-continuous duty cycles (if **DUTY** is **ON** and **OFF**) that repeat between the **START** and **END** times. The combination of all the duty cycles and recording periods generated by all the blocks makes up the daily recording schedule.

The **START** and **END** times for the block can be a fixed time or relative to sunset or sunrise. Times are specified using a 24-hour clock (HH:MM). When relative to sunset or sunrise, a positive (+) or negative (-) offset can be specified.

The **DUTY** cycle determines how often recording occurs between the start and end times. When set to **always**, recording is continuous between the start and end times. When set to **ON** and **OFF**, recording occurs for the specified number of hours and minutes (**ON**) followed by a period of inactivity (**OFF**). The duty cycle repeats as many times as possible before the **END** time is reached.

The duty cycle begins at the **START** time, not when you begin running the schedule. For example, if you begin the following schedule by pressing **SCHEDULE START** at 10:50, the recorder sleeps until the next 15-minute **ON** duty cycle occurs at 11:00.

```
START: time      07:00
DUTY:ON00:15OFF00:45
END:   time      19:00
01/01 [ADD]
```


A typical schedule might only need one block; however, you can combine up to ten (10) blocks in a single schedule and can even overlap them. The SM4 scans all blocks and combines all their recording periods.

For example, you can create a schedule to record continuously from sunset to sunrise in one block and to record 5 minutes on the hour throughout the whole day (24 hours) in another block. The recorder combines these, resulting in 5-minute recordings during the days and continuous recordings during the nights.

In another example, if one block generates a recording period from 08:00 to 10:00, and a second block generates a recording period from 09:00 to 11:00, the resulting schedule yields a single recording period from 08:00 to 11:00.

6.2 SM4 Configurator Software

In addition to configuring schedules and settings on the recorder, you can use the Song Meter SM4 Configurator software to confirm schedule behavior on a graphical calendar and to estimate power consumption and SD memory card usage for schedules that you plan to run.

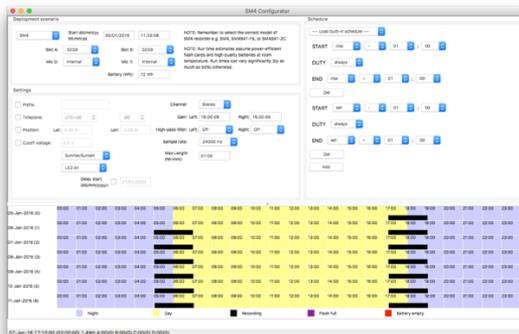

We recommend using the software to configure the recorder's settings and schedule when possible as the additional visualization and information it provides allows you to be sure that your schedule and settings will perform as intended. The software is free and available for Mac, Windows, and Linux at www.wildlifeacoustics.com.

6.3 Editing a Schedule

Use this procedure to edit a schedule directly on the recorder using the Display and buttons. We recommend that you edit schedules using the Song Meter SM4 Configurator software whenever possible; however, if you are in the field and need to edit a schedule, this method is convenient.

The recorder comes from the factory with the *Record Always* Quick Start schedule pre-loaded. You can select or import another schedule if that provides a better starting point for your custom schedule.

1. Navigate to **Main Menu > Schedule > Edit Schedule**.
2. Edit any of the three lines of a schedule block:
 - a. **START**: Press **▲ Up** or **▼ Down** to select rise, set, or a specific time. Press **▲ Up** or **▼ Down** to adjust the + plus or – minus sign for times that are relative to sunrise or sunset. For example, enter **rise -01:15** to start recording one hour and fifteen minutes before the calculated sunrise time.
 - b. **DUTY**: Schedules can record continuously between the **START** and **END** times (**always**) or for a specific repeating duty cycle within those times (**ON & OFF**). To learn more, see the schedule examples in this chapter.
 - c. **END**: Press **▲ Up** or **▼ Down** to select rise, set, or a specific time. Press **▲ Up** or **▼ Down** to adjust the + plus or – minus sign for times that are relative to sunrise or sunset. For example, enter **rise -01:15** to start recording one hour and fifteen minutes before the calculated sunrise time.
3. Press **ENTER** to save your changes.

TIP: To undo your changes in any line, you can press **◀ Left** to return to the start of the line and revert to its original value.

6.4 Adding or Deleting Schedule Blocks

When you edit a schedule, you can add or delete schedule blocks.

To add a new block:

1. Press **▼ Down** repeatedly to navigate to the bottom line of the last block in the schedule.
2. Press **▶ Right** to advance to **[ADD]** and press **ENTER**. The bottom line below the block shows the number of the block you are viewing and the total number of blocks.

```
START: time    00:00
DUTY:  always
END:   time    00:00
02/02  [ADD]   [DEL]
```

TIP: To move to the previous schedule block, press **▲ Up** when on the **START** line. To move to the next schedule block, press **▼ Down** when on the bottom line.

To delete a block:

1. Press **▲ Up** or **▼ Down** to navigate to the bottom line of the block.
2. Press **► Right** to advance to **[DEL]** and press **ENTER**.

The following example stretches the display to demonstrate the concept of adding multiple code blocks in a schedule:

```
START: set      -00:05
DUTY:  always
END:   rise     +00:00
01/03  [DEL]
```

```
START: time     09:15
DUTY:  always
END:   time     11:15
02/03  [DEL]
```

```
START: set      +02:15
DUTY:  always
END:   rise     +01:30
03/03  [ADD] [DEL]
```

6.5 Schedule Block Examples

This section provides recording schedule examples that demonstrate how schedule blocks work. A schedule specifies when the SM4 records but does not necessarily result in a single file for the entire period. The number of recordings for a given schedule will be dictated by the **Max Length** setting.

Record Continuously All Hours of Every Day

The following schedule records continuously all day and night, 24 hours per day.

```
START: time     00:00
DUTY:  always
END:   time     00:00
01/01  [ADD]
```

NOTE: This schedule appears under the **Quick Start** menu as **Record Always**. It runs continuously until you press **SCHEDULE STOP** or it runs out of power or memory space.

Whenever the start and end times are identical and **DUTY** is set to **always**, your schedule is essentially the same as the **Record Always** schedule.

Record Continuously for a Portion of Each Day

The following schedule records continuously for the same six (6) hours daily:

```
START: time      04:00
DUTY:  always
END:   time      10:00
01/01  [ADD]
```

The **Max Length** audio setting determines the maximum recording file duration in hours and minutes. For example, to capture output from this schedule in hourly segments (6 recordings per day), set the **Max Length** setting to 01h:00m.

Record in 15-Minute Segments

The following schedule starts at six o'clock in the evening and records for the first 15 minutes of every hour until six o'clock in the morning.

```
START: time      18:00
DUTY: ON00:15OFF00:45
END:   time      06:00
01/01  [ADD]
```

Record in 5-Minute Segments Every Hour

The following schedule records for 5 minutes at the beginning of each hour all day and continues indefinitely.

```
START: time      00:00
DUTY: ON00:05OFF00:55
END:   time      00:00
01/01  [ADD]
```

NOTE: The **ON** and **OFF** periods need not add up to an hour, but if they do not add up to a factor of 24 hours, the duty cycle truncates and restarts at the start time. For example, a duty cycle with **ON** 00:04 and **OFF** 00:03 divides 24 hours into 205 7-minute cycles plus one 5-minute partial cycle. In the 206th cycle, the schedule records for 4 minutes and then pauses for only 1 minute (instead of 3). This pattern repeats daily.

This schedule appears in the **Quick Start** menu as **Record 5on & 55off**.

Record Continuously Before Sunset until Sunrise

The following schedule starts every day 30 minutes before sunset and records continuously until sunrise on the following day.

```

START: set      -00:30
DUTY:  always
END:   rise     +00:00
01/01  [ADD]

```

Record in Multiple Blocks Relative to Sunset and Sunrise

The following schedule uses two blocks. The first block defines a period relative to sunrise and the second block defines a period relative to sunset. The combined result records for two hours centered at sunrise and two hours centered at sunset.

This schedule appears in the **Quick Start** menu as **Record Dawn & Dusk**.

```

START: rise     -01:00
DUTY:  always
END:   rise     +01:00
01/02  [DEL]

```

```

START: set      -01:00
DUTY:  always
END:   set      +01:00
02/02  [ADD]   [DEL]

```

6.6 Importing a Schedule

You can import a schedule file (for example, mySchedule.SM4S) from an SD memory card. The imported schedule also includes settings.

1. Save a custom schedule to the top-level directory (not in a folder) of an SD memory card from the Song Meter SM4 Configurator software, or export a schedule to an SD memory card from another recorder.
2. Insert the SD memory card in slot A of the recorder.
3. Navigate to **Main Menu > Schedule > Import Sched+Setts**.
4. At the **Select Schedule File** prompt, press **▲ Up** or **▼ Down** to select a schedule file on your SD memory card. Press **ENTER**.

NOTE: The file name must be 28 characters or less. The recorder does not recognize or display longer file names on the import screen.

5. If no warnings or errors are found, the following message appears:

```
Schedule imported
```

The imported schedule is now the current schedule and is ready for you to start or edit it.

6. Press **◀ Left** to return to the **Schedule** menu.

NOTE: Schedules exported from a recorder and imported on another will not override the second recorder's **Prefix**, **Latitude**, **Longitude**, **Time zone**, or **Battery Cutoff** settings. Schedules created or edited by the Song Meter SM4 Configurator software can selectively override any setting upon import.

6.7 Exporting a Schedule

You can export the current schedule including its settings to an SD memory card.

1. Insert an SD memory card in slot A.
2. Navigate to **Main Menu > Schedule > Export Sched+Setts**.

The following message appears:

Schedule exported

3. (Optional) Remove the SD memory card.

The exported file is named with the recorder prefix and the .SM4S extension.

For example:

SM400155.SM4S

The default prefix is the device model and serial number. You can specify a new prefix on the recorder or in a custom schedule.

CAUTION: If a file with that name already exists on the SD memory card, it is overwritten.

After exporting the schedule, you can share it with others, load it on another recorder, or edit it using the SM4 Configurator software.

7 Utilities

7.1 Exporting Diagnostics

This procedure exports a diagnostic file that can be used to assess the audio performance, settings, schedule, and status of the recorder. The Wildlife Acoustics Support Team can use this information to help diagnose problems.

1. Insert an SD memory card into slot A.
2. Navigate to **Main Menu > Utilities > Export Diagnostics**.
3. The recorder performs internal diagnostic tests and then exports the test results, the current schedule, and the settings to a file. The file is named with the recorder prefix, the date and time, and the .sm4dump extension:
PREFIX_YYYYMMDD_hhmmss.sm4dump
4. Remove the SD memory card and insert it into a computer in order to send the file to Wildlife Acoustics.

7.2 Resetting to Factory Default Settings

This procedure restores all recorder settings to their original default values as they were configured when your recorder was first assembled and tested.

1. Navigate to **Main Menu > Utilities > Set factory default**.
2. Select **Yes** on the confirmation screen.

CAUTION: When you select **Yes** and reset defaults, your custom settings and any edited schedules are erased.

7.3 Testing Microphones with the Calibrate Utility

You can view and verify the sensitivity of built-in or external acoustic microphones. This utility displays dB (re full scale) at 1kHz.

NOTE: This procedure is only for use with a third-party microphone calibrator that emits a calibrated 1.0 kHz signal.

1. Navigate to **Main Menu > Utilities > Calibrate Mics**.

```
MICROPHONE CALIBRATE
@1kHz:
Ch 0:      -4.8 dBV
Ch 1:      -73.6 dBV
```

2. Test the microphone by generating a 1 kHz signal with the professional microphone calibrator and sliding it over the microphone. The values represent amplitude levels at 1 kHz.
3. Press any button to end the calibration.

7.4 Formatting SD Memory Cards

This procedure formats the inserted SD memory cards. Use this procedure prior to all deployments for optimal performance.

WARNING! This procedure erases all data on the SD memory card. Verify that you have saved any important schedules or recording files before running this utility.

1. Insert an SD memory card in slot A and an optional second card in slot B.
2. Navigate to **Main Menu > Utilities > Format All Cards**.
3. At the **Confirm: Format All?** prompt:
 - Select **No** to cancel this procedure. Any existing data files remain on the SD memory card(s).
 - Select **Yes** to format the SD memory cards in both slots.
4. If you select **Yes**, progress messages appear, and then the display returns to the **Utilities** menu.

7.5 Updating the Firmware

The SM4 is field-upgradeable. Firmware updates are periodically available with fixes or improvements.

1. Download new firmware from www.wildlifeacoustics.com. (While visiting our website, you can join our mailing list to receive important notices about your SM4 and related products.)
2. Save or copy the firmware file to the top-level directory (not in a folder) of an SD memory card and insert it into the recorder in slot A.
3. Navigate to **Main Menu > Utilities > Firmware Update**.
The recorder scans the SD memory card for .SM4 firmware files.
4. At the **Select upgrade file** prompt, select the firmware update file and press **ENTER**. The recorder applies the new firmware and restarts.

8 Specifications

8.1 Physical

Length: 8.6 inches (218 mm)
Width: 7.3 inches (185 mm)
Depth: 2.8 inches (71 mm)
Weight: 1.6 pounds (0.73 kg)
Weight with 4 D Batteries: 2.9 pounds (1.3 kg)
Operating Temperature: -4°F to 122°F (-20°C to 50°C)
Enclosure: Weatherproof durable polycarbonate. A pressure vent and a self-regenerating desiccant packet control humidity and prevent condensation.

8.2 Power

Battery Specifications: The recorder uses four (4) standard D size disposable alkaline batteries or rechargeable NiMH batteries.

Estimated Recording Time:

Alkaline batteries (14,000 milliamp-hours at 1.5V each): up to 400 hours

NiMH LSD batteries (9,500 milliamp-hours at 1.2V each): up to 250 hours

NOTE: SD memory cards consume more than half of all the power used by the recorder. The recording time provided by different card types and manufacturers can vary by as much as 50%. Based on their low power consumption in our tests, we recommend SanDisk SDHC/SDXC cards; however, third-party card performance cannot be guaranteed and other brands may also offer similar performance. Other factors, such as card capacity, battery type and quality (including rechargeable batteries), temperature, and recorder configuration can also affect recording time.

External Power Voltage: 5 – 17 volts DC

Clock Backup Battery Type: 3.0-volt lithium CR2032 (approximate 3-year life)

Internal Clock Accuracy: 3.5ppm from -40°C to 0°C, 2.0ppm from 0°C to 40°C (Temperature-Compensated Crystal)

8.3 SD Memory Cards

Type: Supports up to 32 GB (SDHC) or up to 512 GB (SDXC) per slot. Supports up to 1.0 terabyte total capacity using two 512 GB SDXC cards.

Formats: FAT32 for SDHC or exFAT for SDXC

8.4 Audio

Channels: 2

Recording Format: 16-bit PCM .wav

Analog to Digital Converter Full-scale: 0.707V rms (2v p-p)

Preamplifier Gain: 24dB used for internal microphones

Amplifier Gain: 0.0 – 59.5 dB in 0.5-dB steps

Noise Floor: -93dBV, A-Weighted (@0dB gain, HPF disabled)

High Pass Filter: Selectable 2-pole at 220 Hz or 1 kHz

Supported Sample Rates (Hz):

8000, 12000, 16000, 22050, 24000, 32000, 44100, 48000, and 96000

Anti-Alias Filter Performance:

Fraction of Sample Rate:	Anti-Alias Filter Gain (dB):
0 to 0.39	±0.1
0.4125	-0.25
0.45	-3.0
0.5	-17.5
0.55	-75.0

8.5 Microphones

Built-in microphones or SMM-A2 acoustic external microphone

Enclosure: Weather resistant


Sensitivity: $-4 \pm 3\text{dB}$ ($0\text{dB}=1\text{V}/\text{pa}@1\text{kHz}$)

Signal-to-Noise Ratio: 80dB typical at 1kHz (1 Pa, A weighted network)

Dynamic Range: 14dB - 94dB SPL at 0dB gain

Directionality: Omnidirectional

Frequency response: Typical as shown in chart below.

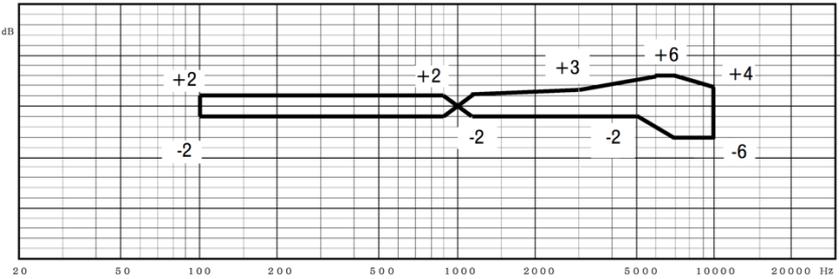

SMM-A1 acoustic external microphone

Enclosure: Weatherproof


Sensitivity: $-11 \pm 4\text{dB}$ ($0\text{dB}=1\text{V}/\text{pa}@1\text{kHz}$)

Signal-to-Noise Ratio: $> 68\text{dB}$

Dynamic Range: 26dB - 102dB SPL at 0dB gain

Directionality: Omnidirectional

Frequency response: Typical as shown in chart below.

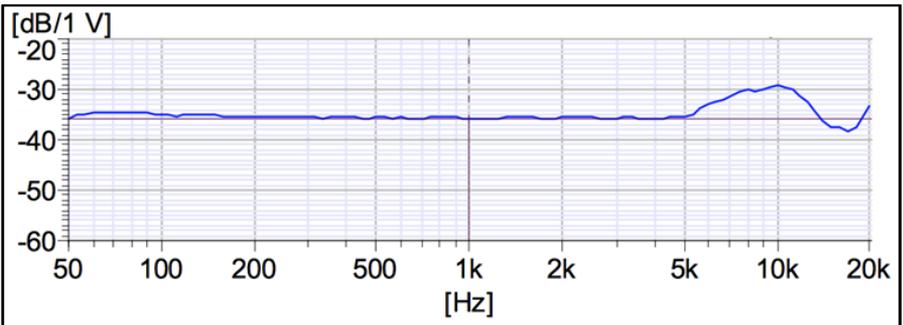

9 Warranty and Disclosures

Except as specifically provided herein, Wildlife Acoustics makes no warranty of any kind, express or implied, with respect to this product.

Hardware Limited Warranty

Product	Components	Hardware Warranty Period
Song Meter SM4	All components (excluding built-in and external microphones and accessories)	3 Years
Song Meter SM4	Built-in and external microphones and accessories	1 Year

Wildlife Acoustics, Inc. Limited Warranty

HARDWARE: Wildlife Acoustics, Inc. (“WAI”) warrants to the original end user (“Customer”) that new WAI branded products will be free from defects in workmanship and materials, under normal use. Refer to the Hardware Limited Warranty table at the top of this page for the applicable warranty period from the original date of purchase.

WAI warrants refurbished WAI products, marked and sold as such, for ninety (90) days from the original purchase date.

SOFTWARE: WAI warrants to Customer that any WAI branded software will perform in substantial conformance to their schedule specifications for a period of ninety (90) days from the date of original purchase. WAI warrants the media containing software against failure during the warranty period. WAI makes no warranty or representation that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

EXCLUSIONS: This warranty excludes (1) physical damage to the surface of the product, including cracks or scratches on the outside casing; (2) damage caused by misuse, neglect, improper installation or testing, unauthorized attempts to open, repair, or modify the product, or any other cause beyond the range of the intended use; (3) damage caused by accident, fire, power changes, other hazards, or acts of God; or (4) use of the product with any non-WAI device or service if such device or service causes the problem.

Any third party products, including software, included with WAI products are not covered by this WAI warranty and WAI makes no representations or warranties on behalf of such third parties. Any warranty on such products is from the supplier or licensor of the product.

No warranty is provided by WAI unless the product was purchased from an authorized distributor or authorized reseller.

EXCLUSIVE REMEDIES: Should a covered defect occur during the warranty period and you notify WAI, your sole and exclusive remedy shall be, at WAI’s sole option and expense, to repair or replace the product or software. If WAI cannot reasonably repair or replace then WAI may, in its sole discretion, refund the purchase price paid for the product. Replacement products or parts may be new or reconditioned or comparable versions of the defective item. WAI warrants any replaced or repaired product, part, or software for a period of ninety (90) days from shipment, or through the end of the original warranty, whichever is longer.

OBTAINING WARRANTY SERVICE: Customer should refer to the WAI website at www.wildlifeacoustics.com/support/contact-support for information on obtaining warranty service authorization. Methods for obtaining warranty service may vary depending on whether purchases were made from an authorized provider of WAI products or from WAI directly. All requests for warranty service authorization must be made within the applicable warranty period. Dated proof of original purchase will be required. Products or parts shipped by Customer to WAI must

be sent postage-paid and packaged appropriately for safe shipment. WAI is not responsible for Customer products received without a warranty service authorization and may be rejected. Repaired or replacement products will be shipped to Customer at WAI expense. All products or parts that are replaced become the property of WAI. WAI shall not be responsible for Customer software, firmware, information, or memory data contained in, stored on, or integrated with any products returned to WAI for repair, whether under warranty or not. The repair and replacement process for products or parts in locations outside of the United States will vary depending on Customer’s location.

WARRANTIES EXCLUSIVE: THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, TERMS OR CONDITIONS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, CORRESPONDENCE WITH DESCRIPTION, SATISFACTORY QUALITY AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED BY WAI AND ITS SUPPLIERS.

LIMITATIONS OF LIABILITY: NEITHER WAI NOR ITS SUPPLIERS SHALL BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, LOSS OF INFORMATION OR DATA, LOSS OF REVENUE, LOSS OF BUSINESS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE OR USE OF THIS PRODUCT, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR ANY OTHER THEORY, EVEN IF WAI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED REMEDY SPECIFIED IN THIS LICENCE AGREEMENT IS DEEMED TO HAVE FAILED OF ITS ESSENTIAL PURPOSE. WAI’S ENTIRE LIABILITY SHALL BE LIMITED TO REPLACEMENT, REPAIR, OR REFUND OF THE PURCHASE PRICE PAID, AT WAI’S OPTION. IN NO EVENT SHALL WAI’S LIABILITY FOR ALL DAMAGES RELATED TO THE PURCHASE OF PRODUCT EXCEED THE AMOUNT PAID FOR THE APPLICABLE PRODUCT. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

DISCLAIMER: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages so the above limitations and exclusions may be limited in their application to you. When implied warranties may not be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights; you may have other rights that may vary depending on local law. Your statutory rights are not affected.

GOVERNING LAW: This Limited Warranty shall be governed by the laws of the Commonwealth of Massachusetts, and by the laws of the United States, excluding their conflicts of laws principles. The United Nations Convention on Contracts for the International Sale of Goods is hereby excluded in its entirety from application to this Limited Warranty.

DECLARATION OF CONFORMITY (EN 45014)

Manufacturer:
 Wildlife Acoustics, Inc.
 3 Clock Tower Place, Suite 210
 Maynard, MA 01754
 United States of America



Declares that the following product:

Product Name: Song Meter
 Product Model Number: SM4
 Product Type: Bioacoustics Recorder

Conforms to the appropriate country standards and governing regulations listed below and/or on the following page. As the manufacturer, we are fully responsible for the design and production of the above-mentioned equipment.

Federal Communications Commission Rules Part 15, Class A

AS/NZS CISPR 11, 2011, Industrial, scientific and medical (ISM) radio-frequency equipment – electromagnetic disturbance characteristics – limits and methods of measurement, Class A

EN 55011, 2009/A1, 2010, Industrial, scientific and medical (ISM) radio-frequency equipment – Electromagnetic disturbance characteristics – Limits and methods of measurement, Class A

ICES-003, 2012, Industry Canada, Interference-Causing Equipment Standard, Digital Apparatus, Class A

EN61326, 2006 Electrical Equipment for Measurement, Control and Laboratory use EMC

EN61000-4-2 Electrostatic Discharge

EN61000-4-3 Radiated Electromagnetic Fields

This product was tested in a typical configuration.

Ian Agranat, President
 Wildlife Acoustics, Inc.
 January 10, 2016

ELECTROMAGNETIC INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by Wildlife Acoustics, Inc. could void the user's authority to operate the equipment.

Note: Use of ferrite clamped cables are required to comply with the Class B limits in part 15 of the FCC rules. A Fair-Rite 0431164181 ferrite clamp (or equivalent) must be placed on each cable near the recorder with the ferrite residing within one loop of the cable. This clamp is provided with all cables sold by Wildlife Acoustics.

PROHIBITION AGAINST EAVESDROPPING

United States law (Federal Communications Commission Part 15 Section 15.9) states "Except for the operations of law enforcement officers conducted under lawful authority, no person shall use, either directly or indirectly, a device operated pursuant to the provisions of this Part for the purpose of overhearing or recording the private conversations of others unless such use is authorized by all of the parties engaging in the conversation."

You are responsible for complying with all applicable laws within your jurisdiction

PRODUCT DOCUMENTATION

©2016 Wildlife Acoustics, Inc. All Rights Reserved.

This documentation may not be reproduced or distributed in any form or by any means, graphic, electronic, or mechanical, including but not limited to photocopying, scanning, recording, taping, e-mailing, or storing in information storage and retrieval systems without the written permission of Wildlife Acoustics. Products that are referenced in this document such as Microsoft Windows® may be trademarks and/or registered trademarks of their respective owners. Wildlife Acoustics makes no claim to these trademarks. While every precaution has been taken in the preparation of this document, individually, as a series, in whole, or in part, Wildlife Acoustics, the publisher, and the author assume no responsibility for errors or omissions, including any damages resulting from the express or implied application of information contained in this document or from the use of products, services, or programs that may accompany it. In no event shall Wildlife Acoustics, publishers, authors, or editors of this guide be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Song Meter SM4

BIOACOUSTICS RECORDER

User Guide

©2016 Wildlife Acoustics, Inc. All Rights Reserved.
Updated on January 19, 2016

Wildlife Acoustics and Song Meter are registered with the U.S. Patent and Trademark Office.

SM4 is a trademark of Wildlife Acoustics, Inc.

All other trademarks are the property of their respective owners.

The Song Meter is patented (U.S. Pat. No. 7,782,195).

Additional U.S. and international patents and trademarks are pending.

Wildlife Acoustics, Inc.
3 Clock Tower Place, Suite 210
Maynard, MA 01754
(978) 369-5225 or toll-free in the U.S. (888) 733-0200
www.wildlifeacoustics.com

