



See Page 1 for
Quick Start Checklist

Song Meter SM4BAT FS

BIOACOUSTICS RECORDER

User Guide

CONTENTS

1	Quick Start Checklist	1
2	Overview	2
2.1	Introduction.....	2
2.2	Visual Tour.....	3
2.3	The Main Menu.....	4
3	Setup and Installation	5
3.1	Opening the Recorder.....	5
3.2	Turning Power On and Off.....	6
3.3	Installing Internal Batteries.....	6
3.4	Connecting External Power.....	7
3.5	Inserting SD Memory Cards.....	8
3.6	Connecting an External Microphone.....	9
3.7	Connecting the GPS Accessory.....	11
3.8	Securing the Recorder.....	12
3.9	Mounting the Recorder.....	12
3.10	Replacing the Clock Battery.....	13
3.11	Reading the Recorder Temperature.....	13
4	Settings	14
4.1	Navigating the Menus.....	14
4.2	Setting the Date and Time.....	14
4.3	Setting the Device Prefix for Recorded Files.....	15
4.4	Setting the Location and Time Zone.....	15
4.5	Setting the Solar Calculation Method.....	16
4.6	Setting a Minimum External Battery Voltage.....	16
4.7	Audio Settings.....	17
4.8	Setting a Delayed Start.....	20
4.9	Setting the LED Indicator Mode.....	20
5	Making Scheduled Recordings	21
5.1	Recording Operation Overview.....	21
5.2	Using a Quick Start Schedule.....	21
5.3	The Recording Screens.....	22
5.4	Checking the Status of the Recorder.....	23
5.5	Stopping a Recording Schedule.....	24
5.6	Making an Instant Recording.....	24
5.7	Recording Files.....	24
5.8	Recording Metadata.....	25
5.9	Recording Summary Text File.....	25
5.10	Analyzing Bat Recordings.....	26

6	Creating Custom Schedules	27
6.1	Schedule Blocks	27
6.2	SM4 Configurator Software	28
6.3	Editing a Schedule	28
6.4	Adding or Deleting Schedule Blocks.....	29
6.5	Schedule Block Examples	30
6.6	Importing a Schedule	31
6.7	Exporting a Schedule.....	32
7	Utilities	34
7.1	Exporting Diagnostics	34
7.2	Resetting to Factory Default Settings	34
7.3	Calibrating Microphones	34
7.4	Monitoring Ultrasound in Time Expansion Mode	36
7.5	Formatting SD Memory Cards	38
7.6	Updating the Firmware	38
8	Specifications	39
8.1	Physical	39
8.2	Power	39
8.3	SD Memory Cards	40
8.4	Ultrasonic Audio	40
8.5	External SMM-U1 Ultrasonic Microphone	40
9	Warranty and Disclosures	43

1 Quick Start Checklist

- ❑ Release the side latch, open the security cover, and then open the middle section to access the battery bay.
- ❑ Install four (4) new alkaline or NiMH D batteries. Close the middle section. (To use external batteries, see *Connecting External Power*.)
- ❑ Insert one SD memory card in slot A and an optional second card in slot B.
- ❑ Slide the power switch down to **INT** for internal battery power. The recorder powers on and the main menu appears on the display. (If using an external power source, slide the switch up to **EXT**.)
- ❑ Press **CHECK STATUS** to verify the time, microphone, firmware, SD memory cards, battery voltage, and temperature.
- ❑ (Optional) Attach the GPS to auto-set the date, time, and location. A number sign (#) appears in between the date and time on the check status screen when the data setup is complete. Disconnect the GPS.
- ❑ Use the keypad to select **Quick Start** and choose a recording schedule.
- ❑ For schedules that start or end at times relative to sunrise or sunset (for example, *Record Sunset->Rise*), you must set the latitude and longitude, date, time, and time zone. If you attached the available GPS accessory in an earlier step, the location, date, and time are set for you automatically; however, you must always set the time zone. It is not set by the GPS.
- ❑ Press the **SCHEDULE START** button. The schedule begins:
 - The SM4BAT FS *sleeps* (display goes blank) to conserve battery power if a recording is not scheduled in the next 45 seconds.
 - The SM4BAT FS *wakes* (display illuminates) at the next scheduled recording start time and saves recordings to the SD memory card(s).
 - The display shows the next recording period and **ARMED** when listening for bats. **TRIGGERED** appears when a recording is in process.
- ❑ Close the security cover and latch. To secure the recorder, attach an optional lock. Mount the recorder in a suitable location for recording. You can leave the recorder unattended after this step.
- ❑ When the deployment ends, press and hold **SCHEDULE STOP** to finish recording. Eject the SD memory card(s) and review the recordings.

Contacting Support

For issues or questions not addressed in this guide, contact the Wildlife Acoustics Support Team:

- Email: support2016@wildlifeacoustics.com
- North America (toll-free): 1-888-733-0200
- Outside North America: US+1 978-369-5225 (Toll charges may apply.)

2 Overview

2.1 Introduction

The latest generation in the Song Meter series, the SM4BAT FS is a weatherproof, programmable, single channel, full-spectrum, ultrasonic recorder designed for the periodic, seasonal, and long-term monitoring of bats and other ultrasound wildlife in almost any environmental condition. The SM4BAT FS creates high-quality, full-spectrum 16-bit WAV recordings that can be easily viewed or analyzed using our Kaleidoscope software (or third-party software).

You can schedule daily recordings to meet a variety of needs including times that are relative to sunrise and sunset, specific duty cycles with on/off recording patterns, and continuous monitoring all day and all night. The SM4BAT FS optimizes battery life and memory capacity to record for extended periods of time. Using both memory slots and new alkaline batteries, a typical deployment can record for up to 400 hours spanning weeks or months.

Features

- Lightweight, portable, and completely weatherproof
- One-channel full-spectrum 16-bit WAV recorder
- Intelligent recording trigger and noise scrubber to minimize false recordings of non-bat activity
- Up to 40 nightly 10-hour recordings using four (4) alkaline D batteries
- SMM-U1 microphone (3-meter cable included) can be extended with up to 100 meters of cable
- Supports one or two standard SDHC or SDXC memory cards
- Weatherproof keypad and backlit display for easy entry and status
- Dual-color LED indicator provides recording feedback
- Integrated top and bottom mounting flanges are designed to work with cable locks, screws, radiator clamps, bungee cords, and other fasteners
- Easy to set up and use with convenient Quick Start daily recording schedules and one-touch start
- Customize schedules and estimate impacts on SD memory cards and battery life with the available SM4 Configurator software
- One-touch status check shows memory card utilization, battery voltage, and other recorder health information without interrupting recordings
- External power option using an SM3/SM4 power cable (sold separately)
- Self-generated diagnostics assist in basic troubleshooting
- Internal temperature and battery voltage logging
- Headphone port for real-time monitoring and system verification
- Optional GPS accessory automatically sets the date, time, latitude, and longitude and logs recording coordinates

2.2 Visual Tour



ITEM:	DESCRIPTION:
Security Cover	Protects the recorder. The cover swings open/closed and can be secured with a standard lock (sold separately).
LED Status Indicator	Flashes  green every second when recording and every minute when sleeping. Flashes  red every second when armed and waiting for a triggered recording to start.
Latch	Grip and pull to open the security cover. To close, push the security cover down until the latch clicks.
Keypad	Press the keypad buttons to navigate the menus and options on the display. Buttons include  Up or  Down,  Left or  Right, ENTER, SCHEDULE START, SCHEDULE STOP, and CHECK STATUS.
Mounting Flanges	Rugged and ready for almost any environment. Use the top and bottom cutouts to mount the recorder.
Power Switch	Slide down to turn power on using internal battery (INT). Slide up to use optional external power (EXT) or to turn off (if no external power).
Display	Backlit screen displays all main menu items, settings, values, message prompts, and status information.
Memory Slots A and B	Insert removable SD memory cards to store recordings.
Lock Ring	Insert the shackle of an optional key or combination lock to secure your recorder.
GPS Connection	Use the available GPS option to automatically set the date, time, and location settings.
Pressure Vent	Temperature, UV, and water-resistant vent protects the enclosure from condensation.
Headphone Jack	Connect headphones and listen to live bat activity in Time Expansion mode as it is being recorded.

2.3 The Main Menu

Refer to the following table when navigating the main menu on the display.

Menu Item	Description
Quick Start	
Record Sunset->Rise	Based on your location, date, and sunrise/sunset settings, records continuously from sunset until sunrise.
Record Always	Records continuously 24 hours a day.
Settings	
Audio	Configure audio settings for recordings.
Date and Time	Set the local date and time for your recorder.
Location	Set the recorder prefix ID and the latitude, longitude, and time zone for your location.
Sunrise/Sunset Type	Set the method used to calculate the sunrise and sunset times. Choices include astronomical, civil, or nautical twilights or the actual sunrise/set times
Delay Start	Delay the start of your daily schedule until midnight on a specified date.
Battery Cutoff	Set the cutoff voltage for external batteries. To prevent battery damage, the recorder automatically shuts down if the voltage drops below this level.
LED Indicator	Choose to display LED indicators always or only for the first several minutes after you start the schedule.
Schedule	
Edit Schedule	Add, modify, or delete schedule blocks.
Import Sched+Setts	Import a schedule and settings from an SD card.
Export Sched+Setts	Export the current schedule and settings to an SD card.
Utilities	
Time Expansion Mode	Listen to ultrasound through headphones.
Export Diagnostics	Save status and troubleshooting information to an SD card to send to the Wildlife Acoustics Support Team.
Set factory default	Restore the original recorder settings to their factory-fresh values and revert to a like-new state. CAUTION: Any custom schedules or settings are replaced.
Calibrate Mic	Test the sensitivity levels of the connected microphone with the available Ultrasonic Calibrator.
Format all cards	Erase and reformat the SD memory cards. CAUTION: All data on the cards is permanently lost.
Firmware Update	Update the recorder with a new firmware file that you download to an SD memory card.

3 Setup and Installation

3.1 Opening the Recorder

When instructed by the procedures in this guide to open the recorder, follow the steps below.



1. Locate the handle for the security cover on the front right side of the recorder as shown.
2. Grip the handle and lightly pull it to release the latch. The cover flips open and rotates along its hinged spine like a book, exposing the display and keypad in the middle section. At this point, you can insert memory cards, adjust the power switch, and connect an optional GPS or headphones. Continue with the next step only when you are installing batteries.
3. Press the small circular indentation between SD memory card slots A and B with your thumb to release the middle section. If it is difficult to release the section, press down closer to the gasket seam. This section swings open exposing the battery bay.

To close the cover, reverse the steps:

1. Gently and firmly push the middle section (display and keypad) down until it snaps into place.
2. Gently and firmly push the security cover down until it snaps into place.
3. Align the security cover latch with the locking ring and snap into place.

3.2 Turning Power On and Off

Follow these steps to switch recorder power on and off based on your choice of internal or external power source. Only one power source (internal or external) can be active at a time.

1. Open the cover to access the power switch on the side of the middle section above memory slot A.
2. Slide the switch down to **INT** to turn power on when using internal batteries; slide the switch up to **EXT** to turn power on when connected to an external battery. Only one power source is used at a time. Whichever position does not have a battery installed is functionally *off*.
3. When you want to turn the recorder off to conserve battery power, slide the switch to the opposite position (**EXT** when using internal batteries and **INT** when using an external battery).

NOTE: Do not turn the power off when a recording is in progress. To safely exit from recording, press **SCHEDULE STOP**, allow the recorder to return to the **Main Menu**, and then switch the power off. Avoid quickly switching power off and on again (avoid quick switches between **INT** and **EXT**). The recorder can interpret this sudden loss and restoration of power as an error and may start creating diagnostics.

3.3 Installing Internal Batteries

The recorder uses four size D alkaline or NiMH batteries. The SM4BAT FS enters a very low-power sleep state between scheduled recordings to conserve energy and maximize efficiency for long deployments.

TIP: Prior to installation, we recommend that you test all batteries with a high-quality pulse load battery tester such as the ZTS MINI-MBT.

1. Open the recorder.
2. Insert batteries with their polarity (+/-) orientation as shown on the battery bay markings.

NOTE: Do not mix batteries of different types, and do not mix old and new batteries. Remove batteries before storing the recorder for an extended time.

3. Close the middle section and gently press down until it snaps into place.
4. To turn on power, slide the power switch to **INT**.
5. When not in use, set the power switch to **EXT** to conserve internal battery power. With no external battery source, consider the **EXT** position to be *off*. Only one power source (internal or external) can be active at a time.

TIP: Use the Song Meter SM4 Configurator software to estimate the recording requirements for your schedules including battery life and memory storage.

3.4 Connecting External Power

With the optional external power cable, the power connector can accept voltages from 5-17 volts DC. It is intended for 6 or 12-volt external batteries.

CAUTION: If you are unfamiliar with configuring external battery and power systems, consult a local installer for assistance.

1. Each power cable is shipped with a snap-on ferrite to meet standards limiting electromagnetic emissions and protecting against electrostatic discharge. Install the ferrite near the end of the cable as close to the recorder as possible.
2. Loop the cable through and snap the ferrite shut. A zip tie is included for further securing the ferrite. The image shows the ferrite as shipped (right) and as installed (left).
3. Align and seat the cable into the **EXT POWER** port on the side of the recorder. Turn the grey locking ring (black on older SM3 cables) clockwise  firmly until it locks into place.



4. The external power cable includes F2-size spade connectors and ring terminals. Connect the cable to a 6 or 12-volt battery using one of the connectors provided. The SM4BAT FS provides protection against accidental reverse polarity connections.
5. Open the security cover and slide the power switch up to **EXT**.
6. (Optional) Set a minimum voltage to prevent damage to lead-acid batteries that are not designed for deep discharge. See *Setting a Minimum External Battery Voltage*.
7. When not in use, set the power switch down to **INT** to conserve external battery power. With no internal batteries installed, consider the **INT** position to be *off*.

3.5 Inserting SD Memory Cards

Insert at least one SD memory card to save your recordings. On a typical night with bat activity (and no rain or gusty wind), the recorder might use no more than half a gigabyte (0.5 GB). With considerable bat activity it is possible to use several gigabytes per night.

The following table shows the total recording capacity in hours for each card size by sampling rate to help you choose the right memory card size. This is the total time of all triggered or non-triggered WAV files.

SD Memory Card (GB)	Sample Rate:			
	192 kHz	256 kHz	384 kHz	500 kHz
16	12	9	6	5
32	23	17	12	9
64	46	35	23	18
128	93	70	47	36
256	185	139	93	71
512	370	278	185	142

1. Open the security cover and locate memory slots A and B on the side below the power switch.
2. Insert one required SD memory card in slot A or B. Push the card straight in until it clicks into place.
3. (Optional) To extend deployments, insert a second SD memory card in the remaining slot.
4. To remove a card, push it in and release it. The spring-loaded slot ejects your card so you can pull it away safely.



NOTE: You can use slot A, slot B, or both for recording; however, when importing and exporting schedules or updating the firmware you must use slot A.

If the recorder is unable to access or write to your card, an error message appears on the display. If no card is present, insert one. Make sure the small read/write switch on the card is set to allow write access. Use a new memory card, or copy old data to another card or hard disk and then reformat the card to restore its full capacity.

To reformat a card, see *Formatting SD Memory Cards* in *Chapter 7: Utilities*.

NOTE: Do not remove SD memory cards while the SM4BAT FS is recording. This could corrupt the card.

3.6 Connecting an External Microphone

You must connect an available SMM-U1 external microphone to record bats. The SMM-U1 is a highly sensitive and low-noise ultrasonic microphone designed for recording ultrasound up to 250 kHz when operating with an SM4BAT FS. The microphone has a differential output which significantly reduces noise from electromagnetic sources.



NOTE: Mounting cabled microphones on ungrounded non-conductive masts, especially in dry or windy conditions, could result in microphone damage from electrostatic build-up. Check with a professional licensed electrician or installer with experience in outdoor antennas or weather instruments for advice suitable to your situation.

1. Each extension cable is shipped with a snap-on ferrite to meet standards limiting electromagnetic emissions and protecting against electrostatic discharge. Install the ferrite near the end of the cable as close to the recorder as possible.
2. Loop the cable through and snap the ferrite shut. A zip tie is included for further securing the ferrite. The image shows the ferrite as shipped (right) and as installed (left).



3. Align and seat the cable into the keyed **MIC** connector.
4. Turn the grey locking ring (black on SM3 cables) on the microphone or cable clockwise \curvearrowright firmly until it locks into place.
5. Replace the windscreen when the foam begins to break down and flake. With normal outdoor use over time, the foam windscreen fades to brown; however, color degradation does not indicate a loss of integrity.

When installed correctly, the SMM-U1 microphone is completely weatherproof. It features a hydrophobic membrane that is transparent to acoustic or ultrasound signals. This membrane prevents unpressurized water from entering the microphone.

In gusty, windblown rain, water may infiltrate the membrane. To protect the internal ultrasonic transducer from water damage, install the included windscreen. We also recommend positioning the microphone so that it is aimed at least slightly downward to minimize water entry. Bat activity from above is still recorded in this orientation because the microphone is omnidirectional.

The microphone includes a 3-meter cable. The microphone can be extended up to 100 meters with available extension cables in 10 and 50-meter lengths with no signal attenuation or degradation. All connections are fully waterproof.

To learn more about the SMM-U1, see *Specifications*.

Ultrasonic Directional Horn

The omnidirectional SMM-U1 is ideal for unattended monitoring where the precise direction of bat activity is not known in advance. In applications requiring more directionality, the microphone can be adapted for directional sensitivity with the available directional horn.

The Ultrasonic Directional Horn converts the SMM-U1 into a highly directional microphone, while preserving echolocation call quality. The attachment remains weatherproof at angles up to 45-degrees from horizontal.



Microphone Windscreens

Windscreens should be installed for long-term deployments in all areas susceptible to heavy wind-driven rain which, if not mitigated, can result in permanent damage to the microphone element due to water penetration. The risk is greater when deployed with the Ultrasonic Directional Horn. For short-term deployments with less severe weather forecasts or in dry climates, windscreens are not necessary.

Secure the windscreen to the SMM-U1 microphone with the included C-clip. Allow an air gap between the windscreen and the microphone as shown.



For the SMX-Horn directional attachment, secure the large windscreen with the included zip-tie as shown below.



Windscreens attenuate ultrasound by only a few dB when dry. However, they block most ultrasound when soaked with water, until they dry. Drying time can vary significantly based on temperature, humidity, and wind conditions.

3.7 Connecting the GPS Accessory

The optional GPS accessory automatically sets the date, time, latitude, and longitude of the recorder. If you have several SM4BAT FS recorders to deploy in the field, you can use a single GPS accessory to set them up.

1. Open the security cover and plug the GPS cable into the GPS port on the side of the recorder.
2. The recorder automatically detects the presence of the GPS. When the recorder wakes up, the GPS is powered up.
3. Press the **CHECK STATUS** button. A question mark (?) appears between the date and time to indicate that the GPS accessory is attempting to acquire satellite data:



```
2017-Oct-14?14:50:48
R:1.0.0 Mic0:A2 1:A2
SDA: 6/32 B: 0/32
Bat: 5.9V Temp:16.70
```

4. When the GPS has successfully acquired satellite data, the question mark changes to a number sign (#) indicating that the location and clock have been set.

NOTE: The **Location Settings** coordinates as seen on the display in the main menu are read-only when the GPS is attached. You cannot change them.


5. Disconnect the GPS. The available GPS accessory consumes about 90 mA of additional current—more than four times the current of the recorder itself. For passive recording, we recommend that you use the GPS to automatically set the clock and location at the beginning of the deployment but do not keep it attached for the duration of the deployment.

6. Navigate to **Main Menu > Settings > Location > Timezone** and set the time zone. Even with the GPS accessory installed, you must manually set the time zone. The observation of time zones varies worldwide by region.

NOTE: If you are still prompted for latitude and longitude when starting a schedule, it most likely means the GPS accessory does not yet have a fix. Be aware that it can be difficult to acquire a GPS signal in thick vegetation. Also note that the GPS cannot be used for precision time synchronization on the SM4BAT FS as it can on the SM3BAT.

3.8 Securing the Recorder

Close the cover to protect the recorder from environmental conditions. To secure the recorder with a standard key or combination lock, press the latch down and insert the lock shackle through the lock ring.

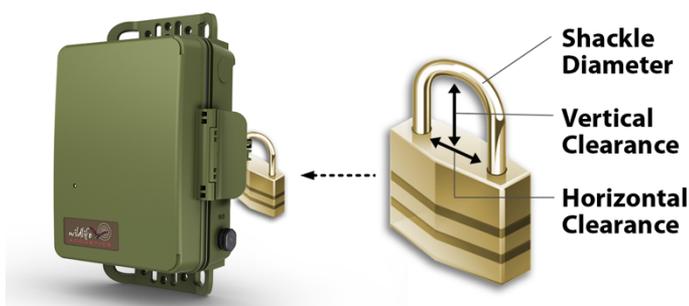

Observe the following size requirements for the lock:

	Minimum:	Maximum:
Shackle Diameter	1/8 inch (3 mm)	3/8 inch (9 mm)
Vertical Clearance	5/8 inch (16 mm)	1.0 inch (25 mm)
Horizontal Clearance	1/2 inch (13 mm)	1.0 inch (25 mm)

NOTE: The lock should be rated for outdoor use.

3.9 Mounting the Recorder


Use the holes in the top and bottom mounting bracket for mounting the recorder with cable locks, screws, radiator clamps, bungee cords, or other fasteners. The enclosure is fully weatherproof and does not require additional protection.



3.10 Replacing the Clock Battery

A separate button cell CR2032 lithium clock battery maintains real-time clock settings when the four main D batteries are being exchanged or are no longer operational. The included battery should last up to 3 years. Use the steps below to replace the internal clock battery.

1. Open the security cover and the middle section to access the battery bay.
2. Locate the circular **CLOCK BATTERY** bay behind the display and keypad opposite the main battery bay.
3. Gently insert a flathead screwdriver to pry the old battery out and replace it with a new one. The side with the CR2032 lettering faces you.

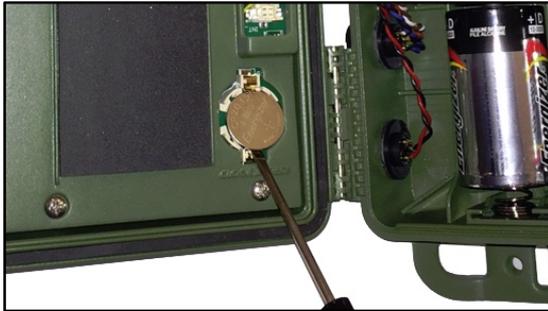

3.11 Reading the Recorder Temperature

The recorder includes an integrated temperature sensor to log temperatures inside the enclosure. This is intended for diagnostics only. Heat from the electronics and/or sunlight on the enclosure can significantly increase the temperature reading above ambient air conditions.

Press the **CHECK STATUS** button to view the current temperature reading.

4 Settings

4.1 Navigating the Menus

To navigate the main menu, select items, and configure the values for various settings, use the following basic steps. All procedures in this guide assume you are familiar with these steps.

1. Press **▲ Up** or **▼ Down** and **ENTER** to navigate any menu.
For example, navigate to **Main Menu > Settings > LED Indicator**.
2. Press **ENTER** or **▶ Right** to select menu items and continue to the next editable item. (**ENTER** and **▶ Right** are interchangeable in the menus with the exception of the line where schedule blocks are added and deleted.)
3. Press **▲ Up** or **▼ Down** to select values.

Tip: To accelerate the pace when selecting higher or lower values, press and continue to hold down the **▲ Up** or **▼ Down** arrow buttons.

4. Press **ENTER** or **▶ Right** to save your edits.
5. Repeat these steps as required. The exact buttons used may vary by setting.
6. Press **◀ Left** to exit a line without saving or to return to the previous menu.

TIP: For improved visibility in low-light environments, press any button on the keypad to illuminate the display. The backlight remains lit while you continue operating the recorder and turns itself off after 30 seconds of inactivity.

4.2 Setting the Date and Time

Follow these steps to set the date and time manually unless you are using the available GPS accessory to automatically set the current date and time.

NOTE: The recorder does not automatically adjust for Daylight Saving Time.

1. Navigate to **Main Menu > Settings > Date and Time**.
The date and time appear on one line in the following format:
YYYY-MM-DD HH:MM:SS
2017-Oct-22 20:17:45
2. Press **▶ Right** to set the date (year, month, and calendar day). As you adjust the month and day, the corresponding sunrise and sunset times appear (according to the Sunrise/Sunset Type setting) for that date.
3. Press **▶ Right** to set the time (hours, minutes, and seconds).
4. To adjust any value, press **▲ Up** or **▼ Down**.
5. Press **ENTER** when finished.

4.3 Setting the Device Prefix for Recorded Files

The prefix appears in the name of every recording file to easily identify the recordings made on a specific recorder or from a common shared schedule. The default prefix combines the model number with the serial number. You can specify a custom filename prefix of up to 12 characters to identify each recorder.

1. Navigate to **Main Menu > Settings > Location > Prefix**.
2. Specify a 1 to 12 character prefix from left to right:
 - a. At the first position, press **▲ Up** to cycle through the alphabetic characters A to Z. Press **▼ Down** to cycle through the numbers 9 to 0. You can also select a hyphen (it is above the digit 9).
 - b. Press **▶ Right** to advance to the next position in the prefix and repeat the previous step.
3. To erase characters, select the blank character that is above the hyphen and below the letter A. All of the characters to the right of the blank character are erased.
4. When finished, press **▶ Right** to advance to the last position and then press **ENTER**.

NOTE: The prefix can only contain capital letters, numbers, and hyphens. When you change the default prefix, the serial number of the recorder no longer appears in the recording file names; however, it does still appear in the metadata inside the file.

4.4 Setting the Location and Time Zone

The selections you make for latitude, longitude, and time zone enable the recorder to determine the specific sunrise and sunset times for each day. If you are not using the available GPS accessory to automatically set the latitude and longitude, you must manually set these parameters. The time zone cannot be set automatically by the GPS and must also be set manually.

NOTE: Schedules and settings exported from one recorder and imported on a second recorder do not overwrite the **Prefix, Latitude and Longitude, Time Zone, or Battery Cutoff** settings on the second recorder. Schedules created or edited by the Song Meter SM4 Configurator software can selectively overwrite any setting upon import.

Specify the local time zone (as used to set the clock) in hours relative to UTC (Universal Time Coordinated). Exact hour, half, and quarter time zones (:00 :15 :30 :45) are supported.

1. Navigate to **Main Menu > Settings > Location > Latitude**.
Enter the north or south latitude.
2. Navigate to **Main Menu > Settings > Location > Longitude**.
Enter the east or west longitude.
3. Navigate to **Main Menu > Settings > Location > Timezone**.
Enter the time zone relative to UTC.

NOTE: The recorder does not automatically adjust for Daylight Saving Time.

4.5 Setting the Solar Calculation Method

The SM4BAT FS can schedule recordings relative to sunrise and sunset times, and adjusts these times as they change during the year. You can choose from four different methods of calculating the sunrise and sunset.

1. Navigate to **Main Menu > Settings > Sunrise/Sunset Type**.
2. Select one of the following solar calculation types:
 - **sunrise/set:** When the sun is just below the horizon.
 - **civil:** When the sun is 6 degrees below the horizon.
 - **nautical:** When the sun is 12 degrees below the horizon.
 - **astronomical:** When the sun is 18 degrees below the horizon.
3. The calculated sunrise and sunset times for the method that you select appear for today. For example:

```
Sunrise/Sunset Type
-Solar nautical

Rise 05:12 Set 18:57
```

4. Press **ENTER** to save your changes.

NOTE: Sunrise and sunset calculations also require other settings including the date and time, latitude and longitude, and time zone.

4.6 Setting a Minimum External Battery Voltage

You can set a minimum voltage cutoff to help prevent damage to external lead acid batteries from over-discharge. If the external battery voltage falls below this cutoff, the schedule is suspended. The SM4BAT FS then wakes every 24 hours to check the voltage and resumes the schedule if the voltage is restored.

1. Navigate to **Main Menu > Settings > Battery Cutoff**.
2. Press **▲ Up** or **▼ Down** to adjust the power cutoff in volts from 0.0 to 12.0 in 0.1-volt increments.
3. Press **ENTER** to save your changes.

NOTE: Leave the cutoff value at 0.0 if you are using internal alkaline batteries. Any non-zero setting decreases internal battery life as the recorder prematurely suspends operation. Also use a setting of 0.0 for external batteries that are designed for deep discharge.

4.7 Audio Settings

When your schedule starts, it applies your current audio settings. When you import or export a schedule, the settings are included.

1. Navigate to **Main Menu > Settings > Audio**.
2. Select an audio setting. To adjust its value, press **▲ Up** or **▼ Down**.
3. Press **ENTER** to save your changes.

Each audio setting is described below:

Gain

You can adjust the gain setting to boost the input level of the audio signal from the microphone. We recommend 12 dB unless the bats are very close in which case 0 dB might work better.

Values: 0 or 12 dB

Default: 12 dB

16k High Filter

This sets the 16 kHz analog high-pass filter. A high-pass filter allows signals only higher than the specified frequency to be recorded.

The high-pass filter is a two-pole filter, which attenuates sounds at 12dB per octave. When the filter is on, an 8 kHz sound would be attenuated by 12dB as it is one octave lower than the 16 kHz frequency of the filter. Every 6dB represents a halving of sound level, so the 8 kHz sound would appear in the recording at one-fourth of its original amplitude.

The SMM-U1 microphone has a built-in 4-pole, 8 kHz high-pass filter. If you expect bats vocalizing below 16 kHz, set the 16k high filter to *off*. The filter in the microphone reduces acoustic sounds below 8 kHz but not sounds above 8 kHz. If you do not expect bats below 16 kHz, set the 16k high filter to *on* in order to reduce acoustic sounds that might cause non-bat recordings to occur.

Values: on or off

Default: off

Sample Rate

Your choice of rate determines the number of samples per second used to store any sounds detected during a recording period. Higher sample rates provide the ability to record higher frequencies. Choose a sample rate that is at least double the highest frequency to be recorded.

Values (kHz): 192, 256, 384, or 500

Default: 256 kHz

Min Duration

Sets the minimum duration of a signal in the specified frequency range that qualifies as a valid signal for the scrubber. The scrubber automatically rejects recordings if it detects no suitable bat echolocation call. The scrubber looks for at least two narrow-band signals of at least this minimum duration, shorter than the maximum duration, and within the frequency range you specified. If two such signals exist, the file is saved; otherwise, the file is not saved.

A value of 1.5 ms is recommended for recording bats.

NOTE: To disable the scrubber, set **Min Duration** and **Max Duration** to *none*.

Range: none, 0.1 to 99.9 milliseconds in 0.1-millisecond increments

Default: 1.5 ms

Max Duration

Sets the maximum duration of a signal in the specified frequency range that qualifies as a valid signal for the scrubber. A value of *none* is recommended for recording bats.

Range: none, 1 to 500.0 milliseconds in 1-millisecond increments

Default: none

Min Trig Freq

Use this command to set the lower bound for the frequencies of interest to the triggering mechanism and noise scrubber. Echolocation calls or other signals occurring below this frequency do not cause a trigger and are considered noise to the scrubber. A setting of 16 kHz works well for most bat applications. It may be necessary to reduce this setting for recording lower-frequency species.

Range: 6 to 99 kHz in 1-kHz increments

Default: 16 kHz

Trigger Level

Specifies the digital trigger level. The trigger is satisfied if a signal exceeds the specified dB level and is above the frequency defined by **Min Trig Freq**. The recorder creates an individual time-stamped WAV file for each triggered event during the scheduled recording period.

NOTE: The trigger is inactive for up to a second after the end of a triggered recording to allow time for the file to be written.

Turning on the trigger also activates file scrubbing. For information on the scrubber, including how to turn it off, see **Min Duration**.

When you turn off the trigger level setting, the **Trigger Window**, **Min Trig Freq**, **Min Duration**, and **Max Duration** settings are ignored and continuous

recordings are made as defined in the recording schedule. **Max Length** dictates the maximum file length for non-triggered recordings.

Range: off, 6, 12, 18, or 24 dB

Default: 12 dB

Trigger Window

The recording continues for this amount of time after the last signal that satisfies the trigger. (The recording is also truncated when it reaches the maximum recording duration set by **Max Length**.) Set the trigger window setting long enough to avoid a recording that ends after one echolocation call.

For example, if bat echolocation calls occur every 0.5 seconds and trigger window is 0.1 seconds, you would get a new trigger with every single echolocation call. Three (3.0) seconds is a good default value.

NOTE: Some standards describe a specific recording trigger window as a *bat pass*.

Values: 1 to 15 seconds in 1-second increments

Default: 3 seconds

Max Length

You can specify the maximum length (time duration) of recordings to comply with file size restrictions set by your analysis software or to define a valid bat pass based on a theoretical maximum recording duration.

The recorder also enforces its own 2.0 GB maximum recording file size. When a recording reaches either maximum, it ends and a new recording file starts.

Values: 1 second to 60 minutes 1-second increments

Default: 00m:15s

4.8 Setting a Delayed Start

The Delay Start setting waits until a future date to start your schedule. The recorder delays the start of the schedule until midnight of the specified day.

1. Navigate to **Main Menu > Settings > Delay Start**.
2. Set a future start date and set **Enable** to *yes*.

NOTE: You can use this feature to synchronize the start of two or more recorders.

When you start the schedule, a warning appears reminding you of the delayed start. If the date is in the past, no warning appears and the schedule starts without delay.

4.9 Setting the LED Indicator Mode

The LED indicator in the keypad blinks to indicate the recorder status. It blinks green once per second during a recording and once per minute when the recorder is sleeping. The LED blinks red when in an armed state waiting for a trigger. This light is visible on the front of the recorder even when the security cover is closed.

1. Navigate to **Main Menu > Settings > LED Indicator**.
2. Choose *always* or *5 minutes only*.

When you choose *5 minutes only*, the LED only appears for approximately the first five (5) minutes of recording after you press **SCHEDULE START** or **CHECK STATUS** or until the first time the unit sleeps. This setting minimizes drawing attention to the recorder and allows you to maintain some level of camouflage when recorder security or visibility is a concern.

5 Making Scheduled Recordings

5.1 Recording Operation Overview

The SM4BAT FS is a full-spectrum recorder. It samples audio signals at a specified sample rate and saves full-spectrum 16-bit WAV files to SD memory cards. The recording schedule determines when each day the SM4BAT FS records and when it sleeps while waiting for a recording period. In most cases, the recorder is configured to make triggered recordings of bat activity.

Recordings are initiated with the configurable trigger and saved only if they make it through the configurable noise scrubber, which automatically deletes recordings that do not appear to contain bats. You can also configure the recorder to make non-triggered recordings which record all the time during the scheduled recording periods defined by the schedule. You can also deactivate the scrubber to avoid deleting non-bat recordings.

This chapter guides you in using the Quick Start schedules. The next chapter covers creating your own schedules as well as importing and exporting them.

5.2 Using a Quick Start Schedule

The Quick Start menu includes pre-configured schedules intended to satisfy most customer requirements. They also serve as excellent starting points for editing your own custom schedules as described in the next chapter.

1. Navigate to **Main Menu > Quick Start**.
2. Choose one of following Quick Start schedules and press **ENTER**.

Name	Definition of schedule
Record Sunset->Rise	Based on your location, date and sunrise/sunset settings, records continuously from sunrise until sunset.
Record Always	Records continuously 24 hours a day.

3. When you change schedules, a confirmation message appears:

```

Overwrite Schedule?
-No
-Yes
  
```

- Select *No* to keep the previously loaded schedule and exit.
- Select *Yes* to continue loading the selected schedule. This overwrites the old schedule. All other settings are unchanged.

Tip: If you want to save any custom edits or blocks you made to a schedule, select *No* here to go back and export that schedule to a memory card. Then, you can choose a new schedule and select *Yes* here with confidence knowing that your previous schedule was backed up.

- Press **SCHEDULE START** to start the schedule. If you are not ready to start it yet, press **◀ Left** to return to the Quick Start menu.

NOTE: The recorder automatically attempts to start the current schedule after three (3) minutes of inactivity.

- When you press **SCHEDULE START**, warning messages may alert you about required settings, missing SD memory cards, or incompatible or missing microphones. Each warning appears for several seconds.
 - Press **▼ Down** to proceed to the next warning. After the last warning, the recorder attempts to run the schedule.
 - Press **SCHEDULE STOP** or **◀ Left** to avoid running the schedule and return to the main menu. Adjust any settings or hardware to resolve the warnings. Press **SCHEDULE START** again when you are ready.
- The recorder shows **Preparing to record** and indicates if the next recording period is continuous or covers a specific timespan:

```
2017-Dec-05 10:58:37
Preparing to record
A CONTINUOUS #00001
```

```
2017-Apr-25 10:59:37
Preparing to record
B 11:00-17:00 #00088
```

If the first recording period start time is more than 45 seconds into the future, the recorder goes to sleep to conserve power:

```
2017-Feb-10 11:05:00
Going to sleep until
2017-Feb-10 19:15:00
```

The recorder wakes up 30 seconds before the next scheduled recording period so that it is ready to record on time.

5.3 The Recording Screens

The following screens appear when recording with the trigger on:

```
2017-Apr-25 23:50:48
Currently Recording:
B 18:45-07:15 #00101
PREPARING @ SR=384k
```

```
2017-Apr-25 23:50:48
Currently Recording:
B 18:45-07:15 #00101
ARMED @ SR=384k
```

```
2017-May-22 23:50:48
Currently Recording:
B 18:45-07:15 #00101
TRIGGERED @ SR=384k
```

The following screen appears when recording with the trigger off:

```
2017-Apr-25 23:50:48
Currently Recording:
B 18:45-07:15 #00102
RECORD @ SR=384k
```

These example screens show the following details:

Line 1: The current date and time.

Line 2: The **Currently Recording:** status message.

Line 3: The current SD memory card slot that the recorder is writing to (**A** or **B**), followed by the beginning and ending times of the current recording period or **CONTINUOUS** if the schedule is set to record all the time (the Quick Start *Record Always* schedule for example). On the right side of the same line is the running count of recording files saved since the recorder was last powered on.

Line 4: The state of the device and the sample rate.

- **PREPARING:** the recorder is writing the file to the SD memory card.
- **ARMED:** the recorder is waiting for audio activity to trigger a recording.
- **TRIGGERED:** the recorder is making a triggered recording.
- **RECORD:** a non-triggered recording is being made.

5.4 Checking the Status of the Recorder

We recommend that you perform this procedure to check the status of the recorder and SD memory cards before every deployment.

1. Press the **CHECK STATUS** button. If the recorder is sleeping, press and hold the button. The following status information appears for ten (10) seconds:

```
2017-Oct-23 09:14:48
R:1.0.0 Mic:U1
SDA: 7/64 B: EMPTY
Bat: 5.2V Temp:16.70
```

- **Line 1:** The current date and time.
- **Line 2:** The installed firmware version and connected microphone:
U1: SMM-U1 microphone
NA: no microphone is connected
- **Line 3:** The consumed memory as a fraction of the total capacity in GB for the SD memory cards in slots A and B. In this example, 7 GB have already been used on a 64 GB card in slot A and there is no card in slot B.
- **Line 4:** The internal battery or external power supply voltage, and the internal temperature in degrees Celsius.

NOTE: The internal temperature of the recorder is intended for diagnostics and not as an accurate measurement of outside air temperature.

2. Press the **CHECK STATUS** button again to return to the previous screen.

NOTE: When the recorder is sleeping, the **Going to sleep until** screen is shown first, and another press of the **Check Status** button is required to see the information screen.

5.5 Stopping a Recording Schedule

When a schedule is running, or scheduled to run, you have the option to stop it.

1. Press and hold the **SCHEDULE STOP** button for several seconds.
2. When you stop a running schedule, the current recording is saved to the SD memory card before it ends.
3. The recorder automatically attempts to resume the current recording schedule after three (3) minutes of inactivity. When not recording for an extended period of time, power the recorder *off*.

5.6 Making an Instant Recording

In addition to running a schedule, you can start an instant recording anytime. Starting an instant recording is like forcing the Quick Start **Record Always** schedule for 24 hours.

1. Verify the recorder is turned on and displaying the main menu. If the recorder is sleeping, press and hold **SCHEDULE STOP** to wake it.
2. Press and hold both the **▲ Up** and **▼ Down** keys at the same time.
3. After showing **Preparing to record**, the recorder immediately starts recording based on your audio settings.
4. Press **SCHEDULE STOP** to stop instant recording. After 24 hours, instant recording will automatically stop and the current schedule will start.

5.7 Recording Files

Audio recording files are saved in the **Data** folder on each SD memory card and use the following naming convention:

PREFIX_YYYYMMDD_HHMMSS.wav

PREFIX: The current prefix as set in the location settings.

YYYYMMDD_HHMMSS: The date-time stamp including the year, month, day, hour, minute, and second when the recording started.

.wav: The audio file name extension for Waveform Audio File Format (WAVE)

5.8 Recording Metadata

Values for the attributes listed below are stored as metadata in your recordings. The Wildlife Acoustics Support Team can use the metadata when troubleshooting issues.

NOTE: You can open a recording in the SM4 Configurator computer software to view the schedule and settings used to make the recording. Also, some of the metadata information is visible in the available Kaleidoscope computer software. Kaleidoscope has the ability to add additional metadata relating to analysis of the recording.

Device Model: The device model name. For example, *SM4BAT FS*.

Device Serial Number: The unique serial number of your recorder.

Firmware Version: The firmware version installed on the recorder.

Prefix: The prefix assigned to the recorder in the location settings.

Timestamp: The date and time when the recording started.

GPS Coordinates: The location of the SM4BAT FS when the recording first started. The metadata store the location coordinates that you manually entered on the recorder as well as the coordinates from the GPS accessory if attached.

Schedule and Settings: The schedule and all settings in use when the recording was made.

5.9 Recording Summary Text File

Approximately once per minute during a recording, the SM4BAT FS appends a line to the summary text (.txt) file. This file is in comma-separated values (.csv) format. You can open it in Microsoft Excel, in database software, or in a text editor. The file begins with a header line which identifies the fields that appear in each line of summary data:

```
DATE, TIME, LAT, , LON, , POWER(V), TEMP(C), #FILES, #SCRUBBED, MIC0 TYPE
```

Three (3) lines from an example summary file appear below:

```
2017-Jan-22, 17:15:24, 42.00000, N, 71.00000, W, 5.9, 12.00, 1, 1, U1  
2017-Jan-22, 17:16:38, 42.20000, N, 71.10000, W, 5.9, 11.75, 0, 4, U1  
2017-Jan-22, 17:17:47, 42.35000, N, 71.18200, W, 5.9, 11.75, 2, 2, U1
```

DATE & TIME: The date and time for each entry. This is the time taking into account the time zone set in the location settings.

LAT & LON: If the GPS accessory is installed, the latitude and longitude are given with identifiers for north (N), south (S), east (E), and west (W). Without GPS, the latitude and longitude values are 0.

POWER(V): The internal battery or external power supply voltage. In the example, the voltage is 5.9 volts.

TEMP(C): The temperature in degrees Celsius inside the recorder. In the example, the internal temperature has fallen from 12.00 to 11.75 degrees.


#FILES: The number of recording files written since the previous summary file line. Since a new summary line is written once per minute, if your recording is longer than 1 minute, a zero appears on all lines until the recording ends. In the example, 1, 0, and 2 files were written during each respective one-minute period.

#SCRUBBED: This is the number of WAV files that were scrubbed, based on the audio settings, since the previous summary file line. These files were not saved on the SD memory card. In the example 1, 4, and 2 files were scrubbed during each respective one-minute period.

MIC_TYPE: The microphone type attached during recording. U1 indicates the SMM-U1 microphone.

5.10 Analyzing Bat Recordings

Your recording files are compatible with all popular third-party full-spectrum analysis programs available. Wildlife Acoustics recommends and supports our Kaleidoscope software, which allows you to easily view and classify your recordings.

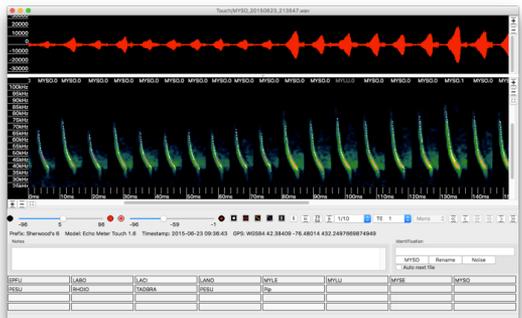

6 Creating Custom Schedules

In addition to using one of the Quick Start schedules, you can also create your own schedule using the built-in editor, or import a schedule from an SD memory card. You can export the current schedule to an SD memory card. You can also use the Song Meter SM4 Configurator software on your computer to create and edit schedules, which can be imported to the recorder.

SM4BAT FS schedules are flexible and portable. Schedules exported from recorders or created by the Song Meter SM4 Configurator software include all configurable settings. The appropriate settings are applied when a schedule is imported. This coupling of schedules with their settings enables you to share entire configurations from one recorder to another.

6.1 Schedule Blocks

Schedule blocks are the core components that define a daily recording schedule. Every schedule has at least one block. A block has the following three lines:

```
START:  time hh:mm or  
        rise +/-hh:mm or  
        set  +/-hh:mm  
  
DUTY:   always or  
        ON hh:mm OFF hh:mm  
  
END:    time hh:mm or  
        rise +/-hh:mm or  
        set  +/-hh:mm
```

Each block defines a single continuous recording period between its **START** and **END** times if **DUTY** is **always**, or a series of smaller periods if **DUTY** is on that repeat between the **START** and **END** times. The combination of all the duty cycles and recording periods generated by all the blocks makes up the daily recording schedule.

The **START** and **END** times for the block can be a fixed time or relative to sunset or sunrise. Times are specified using a 24-hour clock (HH:MM). When relative to sunset or sunrise, a positive (+) or negative (-) offset can be specified.

The **DUTY** cycle determines how often recording occurs between the start and end times. When set to **always**, recording is continuous between the start and end times. When set to **ON** and **OFF**, recording occurs for the specified number of hours and minutes (**ON**) followed by a period of inactivity (**OFF**). The duty cycle repeats as many times as possible before the **END** time is reached.

The duty cycle begins at the **START** time, not when you begin running the schedule. For example, if you begin the following schedule by pressing

SCHEDULE START at 10:50, the recorder sleeps until the next 15-minute **ON** duty cycle occurs at 11:00.

```
START: time    07:00
DUTY: ON00:15OFF00:45
END:   time    19:00
01/01 [ADD]
```


A typical schedule might only need one block; however, you can combine up to ten (10) blocks in a single schedule and can even overlap them. The SM4BAT FS scans all blocks and combines all their recording periods.

For example, you can create a schedule to record continuously from sunset to sunrise in one block and to record 5 minutes on the hour throughout the whole day (24 hours) in another block. The recorder combines these, resulting in 5-minute recordings during the days and continuous recordings during the nights.

In another example, if one block generates a recording period from 08:00 to 10:00, and a second block generates a recording period from 09:00 to 11:00, the resulting schedule yields a single recording period from 08:00 to 11:00.

6.2 SM4 Configurator Software

In addition to configuring schedules and settings on the recorder, you can use the Song Meter SM4 Configurator software to confirm schedule behavior on a graphical calendar and to estimate power consumption and SD memory card usage for schedules that you plan to run. We recommend using the software to configure the recorder settings and schedule when possible as the additional visualization and information it provides allows you to be sure that your schedule and settings will perform as intended. The software is available for Mac, Windows, and Linux at no cost on our website at www.wildlifeacoustics.com.

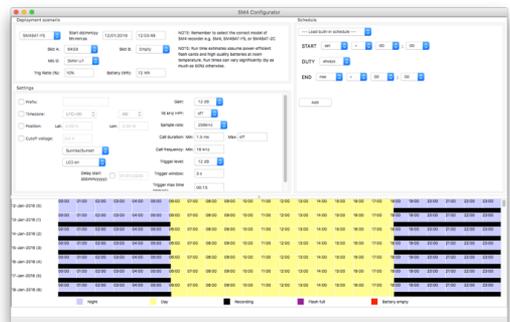

6.3 Editing a Schedule

Use this procedure to edit a schedule directly on the recorder using the display and buttons. We recommend that you edit schedules using the Song Meter SM4 Configurator software whenever possible; however, if you are in the field and need to edit a schedule, this method is convenient.

The recorder comes from the factory with the **Record Always** Quick Start schedule pre-loaded. You can select or import another schedule if that provides a better starting point for your custom schedule.

1. Navigate to **Main Menu > Schedule > Edit Schedule**.
2. Edit any of the three lines of a schedule block:
 - a. **START**: Press **▲ Up** or **▼ Down** to select rise, set, or a specific time. Press **▲ Up** or **▼ Down** to adjust the + plus or – minus sign for times that are relative to sunrise or sunset. For example, enter **rise -01:15** to start recording one hour and fifteen minutes before the calculated sunrise time.
 - b. **DUTY**: Schedules can record continuously between the **START** and **END** times (**always**) or for a specific repeating duty cycle within those times (**ON & OFF**). To learn more, see the schedule examples in this chapter.
 - c. **END**: Press **▲ Up** or **▼ Down** to select rise, set, or a specific time. Press **▲ Up** or **▼ Down** to adjust the + plus or – minus sign for times that are relative to sunrise or sunset. For example, enter **rise -01:15** to start recording one hour and fifteen minutes before the calculated sunrise time.
3. Press **ENTER** to save your changes.

TIP: To undo your changes in any line, you can press **◀ Left** to return to the start of the line and revert to its original value.

6.4 Adding or Deleting Schedule Blocks

When you edit a schedule, you can add or delete schedule blocks.

To add a new block:

1. Press **▼ Down** repeatedly to navigate to the bottom line of the last block in the schedule.
2. Press **▶ Right** to advance to the **[ADD]** label and press **ENTER** to add another block. The bottom line below the block shows the number of the block you are viewing and the total number of blocks.

```
START: time    00:00
DUTY:  always
END:   time    00:00
02/02  [ADD]   [DEL]
```

TIP: To move to the previous schedule block, press **▲ Up** when on the **START** line. To move to the next schedule block, press **▼ Down** when on the bottom line.

To delete a block:

1. Press **▲ Up** or **▼ Down** to navigate to the bottom line of the block you want to remove.
2. Press **▶ Right** to advance to **[DEL]** and press **ENTER**.

The following example stretches the display to demonstrate the concept of stacking code blocks in a series:

```
START: set      -00:05
DUTY:  always
END:   rise    +00:00
01/03      [DEL]
```

```
START: time     09:15
DUTY:  always
END:   time     11:15
02/03      [DEL]
```

```
START: set      +02:15
DUTY:  always
END:   rise    +01:30
03/03 [ADD] [DEL]
```

6.5 Schedule Block Examples

This section provides recording schedule examples that demonstrate how schedule blocks work. A schedule specifies when the SM4BAT FS records but does not necessarily result in a single file for the entire period. If you are making triggered recordings, then the number of recordings for a given schedule will be determined by the trigger and scrubber settings and by bat activity. If you are making non-triggered recordings, then the number of recordings for a given schedule will be determined by the **Max Length** setting.

Record Continuously All Hours of Every Day

The following schedule records continuously all day and night, 24 hours per day:

```
START: time     00:00
DUTY:  always
END:   time     00:00
01/01 [ADD]
```

This schedule appears under the **Quick Start** menu as **Record Always**. It runs continuously until you press **SCHEDULE STOP** or it runs out of power or SD memory card space.

Whenever the start and end times are identical and **DUTY** is set to **always**, your schedule is essentially the same as the **Record Always** schedule.

Record Continuously for a Portion of Each Day

The following schedule records continuously for the same six (6) hours daily:

```
START: time     04:00
DUTY:  always
END:   time     10:00
01/01 [ADD]
```

Record in 5-Minute Segments Every Hour

The following schedule records for 5 minutes at the beginning of each hour all day and continues indefinitely:

```
START: time    00:00
DUTY: ON00:05OFF00:55
END:   time    00:00
01/01  [ADD]
```

NOTE: The **ON** and **OFF** periods need not add up to an hour, but if they do not add up to a factor of 24 hours, the duty cycle truncates and restarts at the start time. For example, a duty cycle with **ON** 00:04 and **OFF** 00:03 divides 24 hours into 205 7-minute cycles plus one 5-minute partial cycle. In the 206th cycle, the schedule records for 4 minutes and then pauses for only 1 minute (instead of 3). This pattern repeats daily.

Record Continuously from Sunset to Sunrise

The following schedule starts every day at sunset and records continuously until sunrise on the following day:

```
START: set     -00:00
DUTY:  always
END:   rise    +00:00
01/01  [ADD]
```

This schedule appears under the **Quick Start** menu as **Record Sunset->Rise**.

Record in Multiple Blocks Relative to Sunset and Sunrise

The following schedule uses two blocks:

```
START: rise    -01:00
DUTY:  always
END:   rise    +01:00
01/02                [DEL]
```

```
START: set     -01:00
DUTY:  always
END:   set     +01:00
02/02  [ADD]   [DEL]
```

The first block defines a period relative to sunrise and the second block defines a period relative to sunset. The combined result records for two hours centered at sunrise and two hours centered at sunset.

6.6 Importing a Schedule

You can import a schedule file (for example, mySchedule.SM4S) from an SD memory card. The imported schedule also includes settings.

1. Save a custom schedule to the top-level directory (not in a folder) of an SD memory card from the Song Meter SM4 Configurator software, or export a schedule to an SD memory card from another recorder.
2. Insert the SD memory card in slot A of the recorder.
3. Navigate to **Main Menu > Schedule > Import Sched+Setts**.
4. At the **Select Schedule File** prompt, press **▲ Up** or **▼ Down** to select a schedule file on your SD memory card. Press **ENTER**.

NOTE: The file name can only be 28 characters or less. The SM4BAT FS will not recognize or display file names of longer length on the import screen.

5. If no warnings or errors are found, the following message appears:

Schedule imported

The imported schedule is now the current schedule.

6. Press **◀ Left** to return to the **Schedule** menu.
7. You can perform any of the following actions on the imported schedule:
 - Edit the schedule.
 - Export the schedule to an SD memory card.
 - Start the schedule.

NOTE: Schedules exported from a recorder and imported on another will not override the second recorder's **Prefix**, **Latitude**, **Longitude**, **Time zone**, or **Battery Cutoff** settings. Schedules created or edited by the Song Meter SM4 Configurator software can selectively override any setting upon import.

6.7 Exporting a Schedule

You can export the current schedule including settings to an SD memory card. When you import a schedule, its settings are applied.

1. Insert an SD memory card in slot A.
2. Navigate to **Main Menu > Schedule > Export Sched+Setts**.

The following message appears:

Schedule exported

3. (Optional) Remove the SD memory card.

The exported file is named with the recorder prefix and the .SM4S extension.

For example:

SM400155.SM4S

The default prefix is the device model and serial number. You can specify a new prefix on the recorder or in a custom schedule.

CAUTION: If a file with that name already exists on the SD memory card, it is overwritten.

After exporting the schedule, you can share it with others, load it on another recorder, or edit it using the SM4 Configurator software.

NOTE: Schedules exported from a recorder and imported on another will not override the second recorder's **Prefix, Latitude, Longitude, Time zone, or Battery Cutoff** settings. Schedules created or edited by the Song Meter SM4 Configurator software can selectively override any setting upon import.

7 Utilities

7.1 Exporting Diagnostics

This procedure exports a diagnostic file that can be used to assess the audio performance, settings, schedule, and status of the recorder. The Wildlife Acoustics Support Team can use this information to help diagnose problems.

1. Insert an SD memory card into slot A.
2. Navigate to **Main Menu > Utilities > Export Diagnostics**.
3. The recorder performs internal diagnostic tests and then exports the test results, the current schedule, and the settings to a file. The file is named with the recorder prefix, the date and time, and the .sm4dump extension:
PREFIX_YYYYMMDD_hhmmss.sm4dump
4. Remove the SD memory card and insert it into a computer in order to send the file to Wildlife Acoustics.

7.2 Resetting to Factory Default Settings

This procedure restores all recorder settings to their original default values as they were configured when your recorder was first assembled and tested.

1. Navigate to **Main Menu > Utilities > Set factory default**.
2. Select Yes on the confirmation screen.

CAUTION: When you select Yes and reset defaults, your custom settings and any edited schedules are erased.

7.3 Calibrating Microphones

Use the available Ultrasonic Calibrator to calibrate an attached SMM-U1 microphone. Since ultrasound is beyond the range of human hearing, verifying performance requires special equipment. The Ultrasonic Calibrator helps you test both the microphone and the full recorder system.

The calibrator uses a 9V alkaline battery (included with the calibrator). When the battery is depleted, the calibrator can no longer provide a tone and its LED no longer illuminates. While the recorder may still emit sound at this point, it cannot be used as an accurate calibrator until the battery is replaced.

The calibrator offers two modes of operation:


- **CAL:** Calibration mode is used to test the microphone at close range.
- **CHIRP:** Chirp mode is used to test the entire system at a greater distance.

7.3.1 Calibration Mode Microphone Testing

1. Verify that you have attached an SMM-U1 ultrasonic microphone.
2. Navigate to **Main Menu > Utilities > Calibrate Mic.** Wait a moment for the following screen to appear:

MICROPHONE CALIBRATE
@40KHZ
Ch 0: -80.59 dBv

3. Turn the calibrator **ON** and set the mode toggle switch to **CAL**.
The calibrator generates a 40 kHz tone. You are now ready to test.
4. (Optional) To cancel testing and exit the utility, press **◀ Left**.
5. Install the clear calibrator microphone adapter by sliding it onto the calibrator from the bottom (the end with the Wildlife Acoustics logo) until it is touching the toggle switches. Position the side with the smaller diameter hole near the toggle switches.

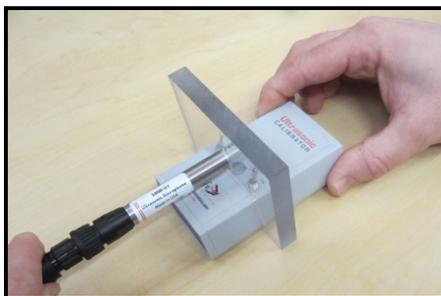

6. Place the microphone in the calibrator microphone adapter. Insert the microphone until it rests against the smaller opening of the adapter circle.
7. While looking at the dBv level on the SM4BAT FS display, slowly rotate the microphone 360 degrees. Note the largest (least negative) number:
 - If the value is higher (less negative) than **-38 dB** your microphone has passed and is ready to use.
 - If the value is lower (more negative) your microphone has lost some or all of its sensitivity and should be replaced.
8. Press **◀ Left** when finished to exit the calibration utility.



7.3.2 Chirp Mode System Testing

To test the system, use the Ultrasonic Calibrator to emit loud ultrasonic signals that can be picked up by the recorder from some distance. Analyze the recording files later to verify that the SM4BAT FS settings are appropriate and the system is functioning as expected.

1. Prepare the SM4BAT FS for recording and place it no more than 20 meters away from the calibrator.
2. Remove the microphone adapter from the calibrator as shown.
3. Before continuing with the next step, read the **WARNING** below.
4. Set the toggle switch to **CHIRP**.
5. The calibrator emits a 100ms 40kHz (+/- 10Hz) tone every 500ms. The amplitude of the tone is 104dB SPL (+/- 3dB) at 10cm. The signal can be picked up by the SM4BAT FS recorder at distances up to 20 meters.
6. Begin recording using **Instant Recording** and monitor with headphones (see *Monitoring Ultrasound in Time Expansion Mode* below) to verify that the signal is being picked up. Or, analyze the recording files to verify the system is operating as expected.



WARNING! Do not place the Ultrasonic Calibrator near your ears! In **CHIRP** mode, the calibrator emits a 40 kHz signal at over 100 dB SPL. Prolonged exposure to high intensity ultrasonic signals may cause permanent hearing loss at audible frequencies.

7.4 Monitoring Ultrasound in Time Expansion Mode

For real-time ultrasonic monitoring, the recorder can continually capture brief intervals of signals and play them back at a slower rate that is translated within the range of human hearing. The Time Expansion Mode utility divides the frequencies of ultrasonic signals by a selectable factor of 10 or 20, allowing you to monitor them with headphones. This mode scans for ultrasonic signals that satisfy the trigger level and frequency settings in the Audio menu and then captures for the duration you specify in the *Buffer Time* setting. After that time, or when the capture buffer is full, the recorder plays back at reduced speed and then repeats this cycle.

1. Navigate to **Main Menu > Utilities > Time Expansion Mode:**

```
Time Expansion Mode
-Expansion Factor 10
-Buffer time 1000 ms
-Start monitoring...
```

2. To adjust the **Expansion Factor**, press **ENTER**. Press **▲ Up** to toggle the ratio value from 10 to 20. The default value is 10. Press **ENTER** to save your changes or **◀ Left** to go back.
3. To adjust the **Buffer time**, press **▼ Down** and then press **ENTER** and then press **▲ Up** or **▼ Down** to set a buffer time between 50 milliseconds and 5,000 milliseconds (5 seconds) in 50-millisecond increments. Press **ENTER** to save or **◀ Left** to go back.
4. Verify that you have attached an ultrasonic mic and headphones.



5. When you are ready, select **Start monitoring** and press **ENTER**. The following screen appears:

```

TIME EXPANSION MODE
Ratio:      10 X
Buffer:    2200 ms
ARMED.....
  
```

CAUTION: Initial headphone volume may be loud. Also, the volume is not adjusted during playback, but the button presses are logged and then the volume is adjusted for the next playback. This can create a very high setting if you press the button many times during the previous playback. Adjust with only one press at a time to be safe.

6. Press **▲ Up** or **▼ Down** to control the volume during playback.

```

TIME EXPANSION MODE
Ratio:      10 X
Buffer:    2200 ms
PLAYBACK.....
  
```

7. Press **SCHEDULE STOP** or **◀ Left** to exit time expansion mode and return to the **Utilities** menu.

7.5 Formatting SD Memory Cards

This procedure formats the inserted SD memory cards. Use this procedure prior to all deployments for optimal performance.

WARNING! This procedure erases all data on the SD memory card. Verify that you have saved any important schedules or recording files before running this utility.

1. Insert an SD memory card in slot A and an optional second card in slot B.
2. Navigate to **Main Menu > Utilities > Format All Cards**.
3. At the **Confirm: Format All?** prompt:
 - Select **No** to cancel this procedure. Any existing data files remain on the SD memory card(s).
 - Select **Yes** to format the SD memory cards in both slots.
4. If you select **Yes**, progress messages appear, and then the display returns to the **Utilities** menu.

7.6 Updating the Firmware

The SM4BAT FS is field-upgradeable. Firmware updates are periodically available with fixes or improvements.

1. Download new firmware from www.wildlifeacoustics.com. (While visiting our website, you can join our mailing list to receive important notices about your SM4BAT FS and related products.)
2. Save or copy the firmware file to the top-level directory (not in a folder) of an SD memory card and insert it into the recorder in slot A.
3. Navigate to **Main Menu > Utilities > Firmware Update**.
The recorder scans the SD memory card for .SM4 firmware files.
4. At the **Select upgrade file** prompt, select the firmware update file and press **ENTER**. The recorder applies the new firmware and restarts.

8 Specifications

8.1 Physical

Length: 8.6 inches (218 mm)
Width: 5.9 inches (150 mm)
Depth: 2.8 inches (71 mm)
Weight: 1.6 pounds (0.73 kg)
Weight with 4 D Batteries: 2.9 pounds (1.3 kg)
Operating Temperature: -4°F to 122°F (-20°C to 50°C)
Enclosure: Weatherproof durable polycarbonate. A pressure vent and a self-regenerating desiccant packet control humidity and prevent condensation.

8.2 Power

Battery Specifications: The recorder uses four (4) standard D size disposable alkaline batteries or rechargeable NiMH batteries.

Estimated Recording Time (dependent on bat activity):

Alkaline batteries (14,000 milliamp-hours at 1.5V each):
275 to 400 hours (27 – 40 ten hour nights)

NiMH LSD batteries (9,500 milliamp-hours at 1.2V each):
150 to 250 hours (15 – 25 ten hour nights)

NOTE: SD memory cards consume more than half of all the power used by the recorder. The recording time provided by different card types and manufacturers can vary by as much as 50%. Based on their low power consumption in our tests, we recommend SanDisk SDHC/SDXC cards; however, third-party card performance cannot be guaranteed and other brands may also offer similar performance. Other factors, such as card capacity, battery type and quality (including rechargeable batteries), temperature, and recorder configuration can also affect recording time.

External Power Voltage: 5 – 17 volts DC

Clock Backup Battery Type: 3.0-volt lithium CR2032 (approximate 3-year life)

Internal Clock Accuracy: 3.5ppm from -40°C to 0°C, 2.0ppm from 0°C to 40°C (Temperature-Compensated Crystal)

8.3 SD Memory Cards

Type: Supports up to 32 GB (SDHC) or up to 512 GB (SDXC) per slot. Supports up to 1.0 terabyte total capacity using two 512 GB SDXC cards.

Formats: FAT32 for SDHC or exFAT for SDXC

8.4 Ultrasonic Audio

Channels: 1

Recording Format: 16-bit PCM WAV

Supported Sample Rates (kHz): 192, 256, 384, and 500

Amplifier Gain: 0 or 12 dB

High Pass Filter: Selectable 2-pole at 16 kHz

Anti-alias Filter: 2-pole at 156 kHz

Equivalent Input Noise: in dBVrms (>10kHz, 0dB gain)

Gain and High Pass Filter	256 and 192 kHz	384 kHz	500 kHz
0dB	-82.4	-81.4	-83.6
0dB+16kHz	-82.4	-81.5	-83.5
12dB	-86.9	-85.2	-85.5
12dB+16kHz	-87.0	-85.5	-85.8

8.5 External SMM-U1 Ultrasonic Microphone



Enclosure: Weatherproof stainless steel


Directional Capability: Omnidirectional

Element: Knowles FG

Output: Differential

Built in high pass filter: 4-pole at 8 kHz

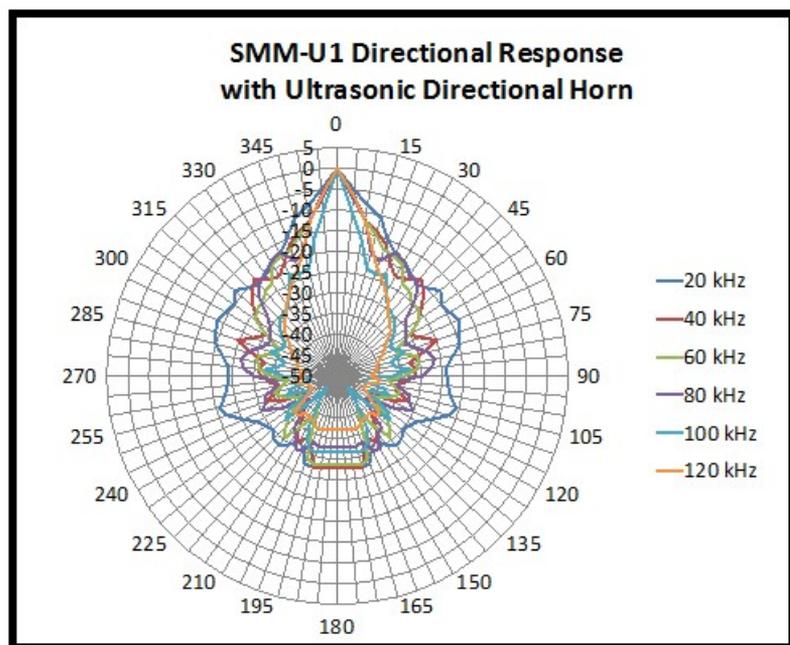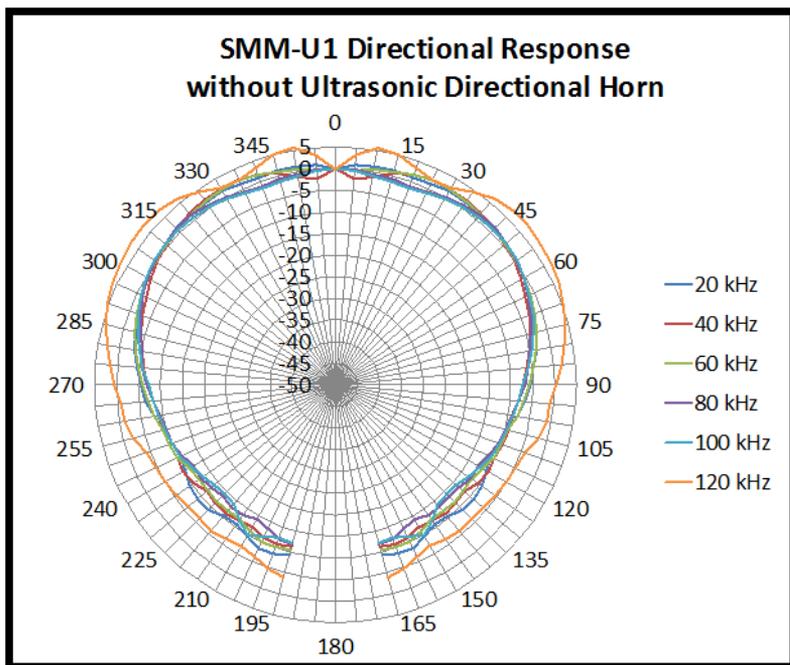

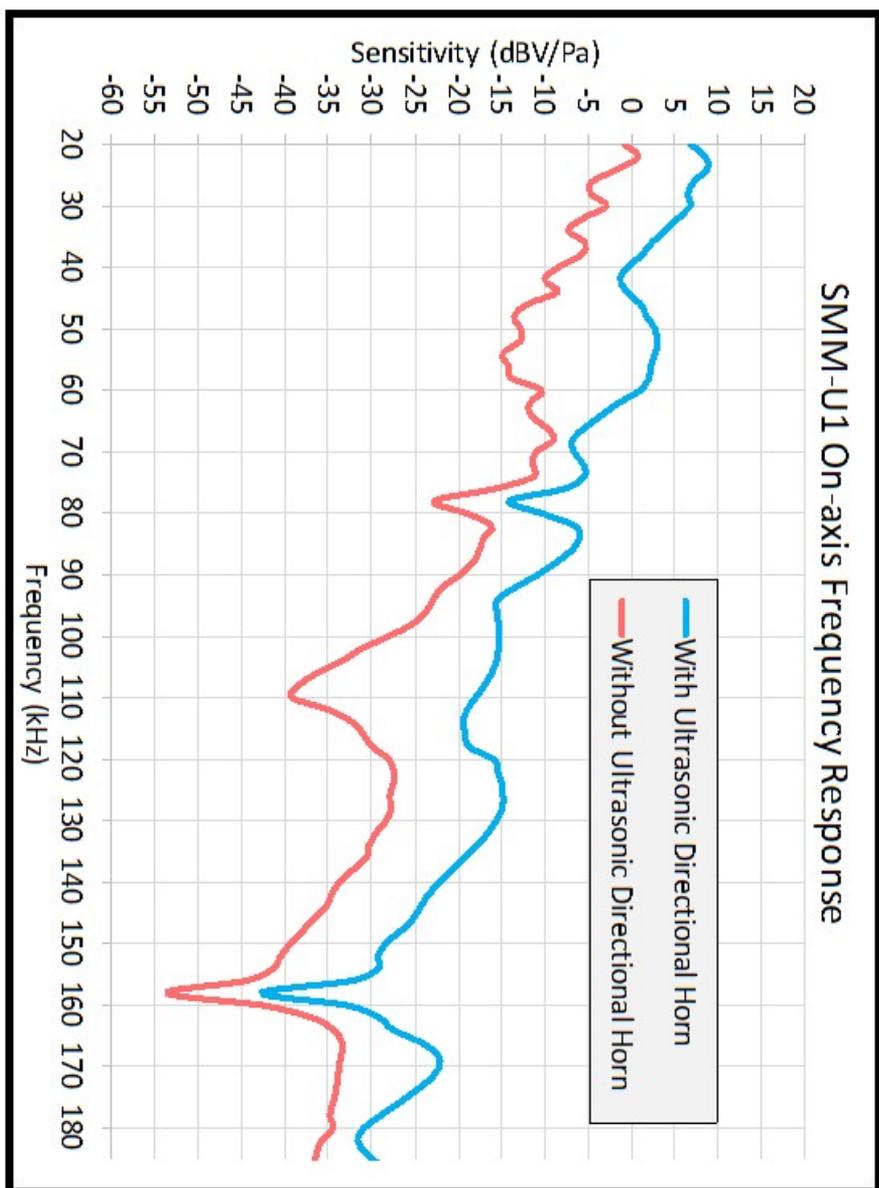

9 Warranty and Disclosures

Except as specifically provided herein, Wildlife Acoustics makes no warranty of any kind, express or implied, with respect to this product.

Hardware Limited Warranty

Product	Components	Warranty Period
Song Meter SM4BAT FS	All components (excluding microphones and accessories)	3 Years
	Microphones and accessories	1 Year

Wildlife Acoustics, Inc. Limited Warranty

HARDWARE: Wildlife Acoustics, Inc. (“WAI”) warrants to the original end user (“Customer”) that new WAI branded products will be free from defects in workmanship and materials, under normal use. Refer to the Hardware Limited Warranty table at the top of this page for the applicable warranty period from the original date of purchase.

WAI warrants refurbished WAI products, marked and sold as such, for ninety (90) days from the original purchase date.

SOFTWARE: WAI warrants to Customer that any WAI branded software will perform in substantial conformance to their schedule specifications for a period of ninety (90) days from the date of original purchase. WAI warrants the media containing software against failure during the warranty period. WAI makes no warranty or representation that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

EXCLUSIONS: This warranty excludes (1) physical damage to the surface of the product, including cracks or scratches on the outside casing; (2) damage caused by misuse, neglect, improper installation or testing, unauthorized attempts to open, repair, or modify the product, or any other cause beyond the range of the intended use; (3) damage caused by accident, fire, power changes, other hazards, or acts of God; or (4) use of the product with any non-WAI device or service if such device or service causes the problem.

Any third party products, including software, included with WAI products are not covered by this WAI warranty and WAI makes no representations or warranties on behalf of such third parties. Any warranty on such products is from the supplier or licensor of the product.

No warranty is provided by WAI unless the product was purchased from an authorized distributor or authorized reseller.

EXCLUSIVE REMEDIES: Should a covered defect occur during the warranty period and you notify WAI, your sole and exclusive remedy shall be, at sole option and expense of WAI, to repair or replace the product or software. If WAI cannot reasonably repair or replace then WAI may, in its sole discretion, refund the purchase price paid for the product. Replacement products or parts may be new or reconditioned or comparable versions of the defective item. WAI warrants any replaced or repaired product, part, or software for a period of ninety (90) days from shipment, or through the end of the original warranty, whichever is longer.

OBTAINING WARRANTY SERVICE: Customer should refer to the WAI website at www.wildlifeacoustics.com/support/contact-support for information on obtaining warranty service authorization. Methods for obtaining warranty service may vary depending on whether purchases were made from an authorized provider of WAI products or from WAI directly. All requests for warranty service authorization must be made within the applicable warranty period. Dated proof of original purchase will be required. Products or parts shipped by Customer to WAI must be sent postage-paid and packaged appropriately for safe shipment. WAI is not responsible for Customer products received

without a warranty service authorization and may be rejected. Repaired or replacement products will be shipped to Customer at WAI expense. All products or parts that are replaced become the property of WAI. WAI shall not be responsible for Customer software, firmware, information, or memory data contained in, stored on, or integrated with any products returned to WAI for repair, whether under warranty or not. The repair and replacement process for products or parts in locations outside of the United States will vary depending on Customer’s location.

WARRANTIES EXCLUSIVE: THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, TERMS OR CONDITIONS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, CORRESPONDENCE WITH DESCRIPTION, SATISFACTORY QUALITY AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED BY WAI AND ITS SUPPLIERS.

LIMITATIONS OF LIABILITY: NEITHER WAI NOR ITS SUPPLIERS SHALL BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, LOSS OF INFORMATION OR DATA, LOSS OF REVENUE, LOSS OF BUSINESS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE OR USE OF THIS PRODUCT, WHETHER BASED IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR ANY OTHER THEORY, EVEN IF WAI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF ANY LIMITED REMEDY SPECIFIED IN THIS LICENSE AGREEMENT IS DEEMED TO HAVE FAILED OF ITS ESSENTIAL PURPOSE. WAI’S ENTIRE LIABILITY SHALL BE LIMITED TO REPLACEMENT, REPAIR, OR REFUND OF THE PURCHASE PRICE PAID, AT WAI’S OPTION. IN NO EVENT SHALL WAI’S LIABILITY FOR ALL DAMAGES RELATED TO THE PURCHASE OF PRODUCT EXCEED THE AMOUNT PAID FOR THE APPLICABLE PRODUCT. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

DISCLAIMER: Some countries, states, or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages so the above limitations and exclusions may be limited in their application to you. When implied warranties may not be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights; you may have other rights that may vary depending on local law. Your statutory rights are not affected.

GOVERNING LAW: This Limited Warranty shall be governed by the laws of the Commonwealth of Massachusetts, and by the laws of the United States, excluding their conflicts of laws principles. The United Nations Convention on Contracts for the International Sale of Goods is hereby excluded in its entirety from application to this Limited Warranty.

DECLARATION OF CONFORMITY (EN 45014)

Manufacturer:
Wildlife Acoustics, Inc.
3 Clock Tower Place, Suite 210
Maynard, MA 01754
United States of America



Declares that the following product:

Product Name: Song Meter
Product Model Number: SM4BAT FS
Product Type: Bioacoustics Recorder

Conforms to the appropriate country standards and governing regulations listed below and/or on the following page. As the manufacturer, we are fully responsible for the design and production of the above-mentioned equipment.

Federal Communications Commission Rules Part 15, Class A

AS/NZS CISPR 11, 2011, Industrial, scientific and medical (ISM) radio-frequency equipment – electromagnetic disturbance characteristics – limits and methods of measurement, Class A

EN 55011, 2009/A1, 2010, Industrial, scientific and medical (ISM) radio-frequency equipment – Electromagnetic disturbance characteristics – Limits and methods of measurement, Class A

ICES-003, 2012, Industry Canada, Interference-Causing Equipment Standard, Digital Apparatus, Class A

EN61326, 2006 Electrical Equipment for Measurement, Control and Laboratory use EMC

EN61000-4-2 Electrostatic Discharge

EN61000-4-3 Radiated Electromagnetic Fields

This product was tested in a typical configuration.

A handwritten signature in black ink, appearing to read 'Ian Agranat'.

Ian Agranat, President
Wildlife Acoustics, Inc.
January 19, 2016

ELECTROMAGNETIC INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by Wildlife Acoustics, Inc. could void the user's authority to operate the equipment.

Note: Use of ferrite clamped cables are required to comply with the Class B limits in part 15 of the FCC rules. A Fair-Rite 0431164181 ferrite clamp (or equivalent) must be placed on each cable near the recorder with the ferrite residing within one loop of the cable. This clamp is provided with all cables sold by Wildlife Acoustics.

PRODUCT DOCUMENTATION

©2016 Wildlife Acoustics, Inc. All Rights Reserved.

This documentation may not be reproduced or distributed in any form or by any means, graphic, electronic, or mechanical, including but not limited to photocopying, scanning, recording, taping, e-mailing, or storing in information storage and retrieval systems without the written permission of Wildlife Acoustics. Products that are referenced in this document such as Microsoft Windows® may be trademarks and/or registered trademarks of their respective owners. Wildlife Acoustics makes no claim to these trademarks. While every precaution has been taken in the preparation of this document, individually, as a series, in whole, or in part, Wildlife Acoustics, the publisher, and the author assume no responsibility for errors or omissions, including any damages resulting from the express or implied application of information contained in this document or from the use of products, services, or programs that may accompany it. In no event shall Wildlife Acoustics, publishers, authors, or editors of this guide be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Song Meter SM4BAT FS

BIOACOUSTICS RECORDER

User Guide

©2016 Wildlife Acoustics, Inc. All Rights Reserved.
Updated on January 19, 2016

Wildlife Acoustics, Kaleidoscope and Song Meter
are registered with the U.S. Patent and Trademark Office.
SM4BAT FS is a trademark of Wildlife Acoustics, Inc.
All other trademarks are the property of their respective owners.
The Song Meter is patented (U.S. Pat. No. 7,782,195 B2).
Additional U.S. and international patents and trademarks are pending.

Wildlife Acoustics, Inc.
3 Clock Tower Place, Suite 210
Maynard, MA 01754
(978) 369-5225 or toll-free in the U.S. (888) 733-0200
www.wildlifeacoustics.com

